



CARD WATCH WARRANTY- (457*44.5)MM

<div>SERVICE</div> <div>Should your watch require service please contact the repair facility:</div> <div>UNIVERSAL WATCH REPAIR 177 S. Old Woodward Ave Birmingham MI 48009 USA Tel: +1 (248) 723-5400 email: service@universalwatch.net</div>	<div>BATTERY REPLACEMENT</div> <div>The battery should be replaced when the watch becomes slow or does not function. Most watch repair centers or jewelers are qualified to properly replace the battery. It is important that the correct battery be used. Batteries are not warranted.</div>	<div>SPECIAL CARE</div> <div>Water resistant watches are fitted with rubber seals that require replacement over time. To insure that the watch maintains its water resistant feature, it is suggested that it be inspected and cleaned by a qualified jeweler of watch repair technician every 2-3 years.</div> <div>Your watch may be cleaned with mild soap and water and buffed with a jewelry polishing cloth to maintain its sheen.</div>	<div>WATER RESISTANCE</div> <div>The case back of your watch will indicate the level of water resistance:</div> <div>Moisture Resistant: The watch is protected against splashing, moisture and condensation. It should not be immersed in water.</div> <div>Water Resistant: The watch has been built to withstand immersion in water up to a depth of 3atm (99ft).</div>	<div></div>	<div>Watch Warranty & Instructions</div>
--	--	--	--	---	--

PAGE 7

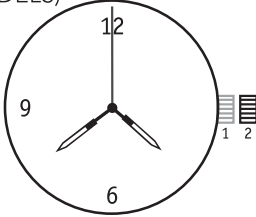
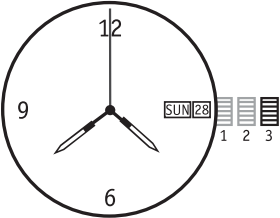
PAGE 7

PAGE 9

PAGE 10

BACK COVER

FRONT COVER

	<div>CERTIFICATE OF GUARANTEE</div> <div>Elite Group NY guarantees this watch for a period of three years against any defects in workmanship and materials. This warranty does not apply to normal wear or abuse and excludes batteries, case, strap, crystal and bracelet. This warranty is void if the watch has been damaged by unqualified service, accident or other means not related to the original materials or workmanship.</div>	<div>SETTING INSTRUCTIONS (NON-CALENDAR MODELS)</div> <div><div><div>To Set The Time</div><div>Pull out the crown until it stops. This is Position 2 (Refer to figure to the right).Turn crown either direction until the desired time is set. After setting is completed, push crown in completely (Position 1) to activate movement.</div></div><div></div></div>	<div>SETTING INSTRUCTIONS (CALENDAR MODELS)</div> <div><div><div>To Set The Time</div><div>Pull out the crown until it stops. This is Position 3 (Refer to figure at the far right). Turn crown either direction until the desired time is set. After setting is completed, push crown in completely (Position 1) to activate movement.</div></div><div><div>To Set Date (if applicable)</div><div>Pull out the crown to Position 2. Turn crown in either direction until date wheel moves. After setting is completed, push crown in completely (Position 1) to activate movement.</div></div></div>	<div>SETTING INSTRUCTIONS (CALENDAR MODELS CONTINUED)</div> <div><div><div>To Set Day/Date (if applicable)</div><div>Pull out the crown to Position 2. Turn crown in clockwise direction to adjust day. Turn crown in counterclockwise direction to adjust date. After setting is completed, push crown in completely (Position 1) to activate movement.</div></div></div>	<div></div>
--	---	---	---	--	---

INSIDE COVER

PAGE 2

PAGE 3

PAGE 4

PAGE 5

PAGE 6