

Tupperware® Care Guide - General Products

Thank you for your order! Here are tips and tricks for the correct, sustainable and enjoyable use of your Tupperware products.

Join the party by visiting www.tupperware.com to see the full range of ingenious Tupperware products.

General Overview

- Always wash your products thoroughly before first use.
- Tupperware products are durable and made for repeated use.
- Tupperware products are washable in standard household dishwashers on the top rack.

Maintenance

- Do not use abrasive cleaning pads or abrasive cleaners, as these will scratch the containers.
- Scrape off solid foods before putting containers in the dishwasher. Avoid rinsing to conserve water. If the containers have been used for "sticky" products or have persistent odors, fill the containers with a mixture of baking soda (1 to 2 tablespoons per quart or liter of warm water) and let them soak for a few hours, then rinse and air dry.
- For specific maintenance tips, refer to the instructions at www.tupperware.com

Good to Know

- Avoid contact with all sources of heat such as a microwave oven, conventional oven, hot plate, flame, hot oil, grill, etc.
- Do not expose closed containers to direct sunlight.
- Do not cut or use sharp objects inside of or against the containers.
- If a new lid does not fit well on a container, then soak the lid for 10 minutes in water at 185 °F (85 °C). Let it cool before touching, and then place it on the container

Warranty

To obtain a copy of the manufacturer's or supplier's warranty for this item, please refer to www.tupperware.com/warranty or call us at [1-800-887-7379](tel:1-800-887-7379).