

PORTABLE ESPRESSO MAKER

READ ALL WARNINGS AND INSTRUCTIONS IN FULL BEFORE USING

WARNINGS

- Use only as directed.
- Not intended for children. Use adult supervision.
- Use only manufacturer approved parts. Using other parts may cause damage or injury and void warranty.
- Product is not designed for commercial use.
- Always use care when handling hot liquids.
- Do not clean with strong detergent and solvent cleanser. See Care Instructions for cleaning.
- Clean before first time use and after each use.
- Use care, some parts are sharp and could cause injury if not handled correctly.

CARE INSTRUCTIONS

Clean before first time use and after each use.

1. Remove espresso capsule or ground coffee.
2. Add water with mild detergent into water reservoir and press down on plunger. Repeat process until water comes out clean.
3. Clean all detachable parts with water and mild detergent.
4. Dishwasher safe. For best results, place in top rack of dishwasher.

TIPS AND SUGGESTIONS

For best results:

- Rinse water reservoir, espresso cup, and accessories with warm water before use.
- When using ground coffee, use freshly roasted coffee beans and grind right before use. It is preferable to use a medium-coarse grind.

PARTS DIAGRAM



USE INSTRUCTIONS

NOTE: Clean product prior to using.

ESPRESSO CAPSULE INSTRUCTIONS

1. While espresso maker is completely assembled, twist water reservoir (B) counterclockwise to remove from grounds chamber (C) and set aside.
2. Place espresso base (F) into grounds chamber, ensuring "This Side Up" text is facing up.
3. Place espresso capsule (sold separately) into grounds chamber (C) with foil side down so it rests on espresso base.
4. Align tabs on espresso capsule holder (E) with internal slots of grounds chamber and slide until fully inserted into grounds chamber.
5. Twist water reservoir (B) onto grounds chamber (C), ensuring that the grounds chamber is sealed. You should encounter slight resistance as the espresso capsule holder punctures the capsule.
6. Twist plunger (A) counterclockwise to remove, and fill water reservoir (B) with hot water to max fill line indicator. Put plunger back in place, being sure to seal water reservoir.
7. Release plunger pump (J) by pressing down on top and turning 1/4 rotation in either direction until plunger pump pops up.
8. Hold over espresso cup and pump plunger rapidly until espresso stops coming out.
9. To lock plunger pump in place, push down and turn 1/4 rotation in either direction. Pump will pop slightly when it locks into place.



GROUND COFFEE INSTRUCTIONS

1. While espresso maker is completely assembled, twist water reservoir (B) counterclockwise to remove from grounds chamber and set aside. Make sure espresso capsule holder base (F) is out of grounds chamber.
2. Remove lid (G) from ground coffee cup (H)
3. Fill ground coffee scoop (I) with freshly ground coffee.
4. Place ground coffee cup over ground coffee scoop and flip over to fill cup. Tap bottom of scoop to ensure all coffee grounds have been transferred and then remove scoop.
5. Place lid (G) onto ground coffee cup. With lid facing up, align tabs on ground coffee cup (H) with internal slots of grounds chamber and slide until fully inserted into grounds chamber.
6. Twist water reservoir (B) onto grounds chamber (C), ensuring that the grounds chamber is sealed.
7. Twist plunger (A) counterclockwise to remove, and fill water reservoir (B) with hot water to max fill line indicator. Put plunger back in place, being sure to seal water reservoir.
8. Release plunger pump (J) by pressing down on top and turning 1/4 rotation in either direction until plunger pops up.
9. Hold over coffee cup and pump plunger rapidly until coffee stops coming out.
10. To lock plunger pump in place, push down and turn 1/4 rotation in either direction. Plunger pump will pop slightly when it locks into place.

NOTE: You may also make tea by following the instructions above but replacing ground coffee with loose leaf tea.



Read Instructions
Before Operating

MADE IN
CHINA



Rev: 092018

VIATEKPRODUCTS.COM

**For questions, assistance, or replacement parts, do not return to your retailer. Contact Viatek® customer service below.
For refunds on items not purchased from Viatek® directly, please contact your retailer.**

VIATEK® 1-YEAR LIMITED WARRANTY

Viatek® warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Viatek® will replace the entire product or, at its option, repair or replace the defective part(s) without charge. Contact Viatek® customer service at 888.784.2835 or at cs@viatek.com to determine whether it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt. Mail prepaid to Viatek Consumer Products Group, Inc. 6011 Century Oaks Dr, Chattanooga, TN 37416. This warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If you have any questions, or would like to learn more about Viatek®, please contact us at 888.784.2835 or at cs@viatek.com.

Register your product online at viatekproducts.com/register-your-product-warranty/

Customer Service / Le service a la clientele / Servicio al Consumidor
☎ 888.784.2835 (+1.423.402.9010) ✉ cs@viatek.com

Model:
PESPRESS01

DO NOT DISPOSE OF BATTERIES IN FIRE. ALWAYS DISPOSE OF BATTERIES PER LOCAL & FEDERAL GUIDELINES.

© 2018 VIATEK CONSUMER PRODUCTS GROUP, INC. All specifications are subject to change without notice. All rights reserved.
Viatek Consumer Products Group, Inc. 6011 Century Oaks Dr. Chattanooga, TN 37416