

ANCHOR  HOCKING

SWING BOARD®

SWING & STRETCH

INSTRUCTIONS FOR THE USE AND CARE OF YOUR SWING BOARD® SWING & STRETCH



PRODUCT FEATURES

- Unfold to use as a solid cutting/serving surface
- Unfold and stretch to insert food prep/serving cups
- Includes (2) 1 cup capacity BPA free cups
- Cups store beneath and board folds for compact storage
- Perfect for charcuterie presentations
- Constructed of hardwood acacia
- Durable ABS hinges fold with ease
- Rubberized feet grip to countertop for secure cutting surface
- Includes juice well
- Full dimensions L 22" x W 14" x H 1.5"

USE & CARE INSTRUCTIONS

- Scrub the board with warm soapy water after use.
- Dry thoroughly after washing.
- Do not immerse the board in water.
- Treat stains with white vinegar or baking soda.
- Oil the surfaces with mineral oil a few times per month.

PREVENTING CROSS CONTAMINATION

- Always use a clean cutting board.
- Wash cutting boards, dishes, and counter tops with hot, soapy water after preparing each food item and before you go on to the next item.
- Use one cutting board for fresh produce and a separate one for raw meat, poultry, and seafood.
- Designate separate boards for meat and foods that will not be cooked before serving (vegetables/breads).

SWING BOARD 1 YEAR LIMITED WARRANTY

Anchor Hocking, LLC promises to repair or replace any Swing Board® product found defective in material or workmanship under normal household use and following care instructions. Minor imperfections and color variations are normal. This excludes damage from misuse or abuse, such as improper cleaning, neglect, accident, fire or, theft and does not apply to scratches, stains and, discolorations. This warranty also excludes incidental or consequential damages.

The following are not covered:


- Damage to the cutting board outside normal household use.
- Splitting or cracking due to inadequate oiling of cutting board.
- Damage due to putting the cutting board into a dishwasher or soaking it in water.
- Normal wear and tear to the wood boards, the interchangeable accessories, & rubber feet.
- Damage due to exposure to extreme heat, cold, open flames or storing it in a damp or humid environment.

It is recommended to follow the care and use instructions supplied in the packaging:


If you have a problem and request a replacement under the terms of the warranty, send the product with vproof of purchase to:

Anchor Hocking, LLC
Return Goods Department
519 Pierce Avenue
Lancaster, OH 43130


Please visit: www.AHpat.net for patent information.

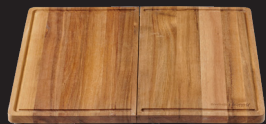

LARGE CUTTING SURFACE (WITHOUT CUPS)
(19" X 14")

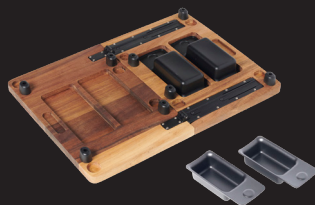

 2 SERVING/FOOD PREP CUPS
1 CUP CAPACITY - BPA FREE



FOLDS IN HALF WITH CUPS INSIDE
FOR EASY STORAGE