

43mm

7.5mm

103mm

148mm

148mm

210mm

GeekHeat®

Personal Heater With Humidifier

Instruction Manual

Model: HH02

READ AND SAVE THESE INSTRUCTIONS

Toll Free: 1-844-801-8880

info@homeeasy.net

Table of contents

Important instructions

2

Operating Instruction

5

Cleaning And Maintenance

6

Troubleshooting

7

Warranty

8

Specification

Product Name

Personal Heater With Humidifier

Model

HH02

Rated Power

500W

Unit Voltage

120V,60Hz

Box Dims

6.3\*6.3\*11 inch

2

IMPORTANT INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS HEATER. WHEN USING ELECTRICAL APPLIANCES, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND PERSONAL INJURY, INCLUDING THE FOLLOWING:

When switching on the appliance for the first time, allow it to run at full power for about two hours to get rid of the unpleasant smell. Make sure that the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when you turn it on for the first time.

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving the unit. Keep flammable materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front and top of the heater and keep them away from the sides and rear of the heater. Keep the rear grille away from walls or drapes so as not to block the air intake.
- Extreme caution and supervision is necessary when any heater is used near children or invalids and whenever the heater is left operating and unattended.
- Always unplug heater when not in use.
- Do not use any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
- Do not use outdoors.
- This heater is not intended for use in bathrooms, laundry areas or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic areas and place it where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- This appliance has a polarized plug (wide blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if not adhered to!
- Connect to properly polarized outlets only.
- Do not insert or allow foreign objects to enter ventilation or exhaust openings, as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

Important instructions

- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons or other damage to property.
- This heater must be plugged into a 120V, 10amp (or more) circuit of its own. Nothing else can be plugged into the same circuit. If unsure if you home meets this specification, consult a certified electrician prior to use. Risk of fire, overheating, malfunction, property damage, injury, or even death may result if not adhered to!
- To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
- It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating of the power cord or fire.
- Ensure the heater is on a stable, secure surface to eliminate the potential of tipping over.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- Be sure that the plug is fully inserted into appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use; check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL your electrician.
- Check that neither the appliance nor the power cable has been damaged in any way during transportation.
- Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Only use tap water in the humidifier. If there is water remains on the nozzle, it may cause misting failure. Please wipe off the water on the nozzle before turning on humidifier.
- Slowly add the tap water in before you use the humidifier, but water don't above the "MAX" of the tank. Make sure there is no water on the surface of the machine and the lid was tightened when you turn on;

Important instructions

27. If the machine has any water on surface when you add the water, Do not use, please turn off the power dry the water and make sure the lid was tightened. CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

**FC**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important instructions

**SAVE THESE INSTRUCTIONS**

**OPERATIONS INSTRUCTIONS**

Be sure to plug into 120V AC, 60Hz outlet. Check that the plug and the socket fit well, then you can operate the appliance.

Heat Fan only

Humidifier/Light

Spray nozzle

Power Light

Lid (back)

40L liter of Water tank

Power switch (Back)

Turn the power switch on, the heater will sound a beep voice and power light will be show red.

You can choose different modes by button

- When pressing the button of (Heat Fan) turns on the fan and PTC, the ring lamp show orange. The ring lamp was change to white and the PTC will stop working, but the fan will keep working when you pressing again. Pressing the button again the ring lamp will be off and the fan will stop working after 15 seconds;
- When pressing the button of (Humidifier) turns on the humidifier. The humidifier will be spray and the ring lamp show winter; please open the lid and slowly add the tap water in before you use the humidifier, but water don't above the "MAX" of the tank. Make sure there is no water on the surface of the machine and the lid was tightened when you turn on. Pressing again will be turn off the humidifier.
- The light in water tank will be on when you keep pressing the button of (Light) three seconds, it can help you for easy to check up the water in the water tank;
- The product has dumping protection. If the product is triggered by dumping, please straighten the product and restart the button selection function.
- Working time: The heater will be turn off after 8 hour before you turn on. The humidifier will be turn off after 4 hour before you turn on. The ring lamp will be turn off after 15 seconds;

Operating Instruction

**PROTECTION SYSTEMS**

**OVERHEAT PROTECTION**

This heater includes an overheat protection system that shuts the unit off when parts of the heater overheat. If this occurs, turn the heater off, unplug it, and inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait 10 to 20 minutes for the unit to cool down then plug it back in and resume the normal operation.

**POWER INDICATOR LIGHT**

This heater is equipped with a power indicator light. The power light will illuminate when the heater is plugged in.

**CLEANING AND MAINTENANCE**

- Before any cleaning, make sure that:
  - The heater is turned OFF
  - Disconnect power supply at source by removing plug from power outlet.
- Regular cleaning:
  - Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
  - Do not use cleaning spray-on liquids or other chemicals on the unit
  - To clean enclosure, use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the heating element and the switches. Allow the unit to dry completely before using it.

**CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.**

**STORAGE**

- Perform the cleaning procedures described in "CLEANING AND MAINTENANCE" section.
- Wipe all parts to dry.
- Pack the heater in a plastic bag and store it in a cool, dry place.

Cleaning and maintenance

**TROUBLESHOOTING**

If your heater fails to operate, please follow these procedures prior to contacting Customer Service.

Problem	Probable Cause	Solution
Heater will not power on and shuts off unexpectedly	Heater is not plugged into a 120V polarized outlet/receptacle.	Ensure unit is in OFF position. Plug in unit and attempt to turn on again.
	The heater was overheat protection feature has turned it off	Turn off the heater, unplug it and wait at least 10 to 20 minutes for the unit to cool down. Plug the heater back in and turn it on again.
Humidifier not spray	There has no or too little water in the water	Open the lid and add the tap water in
	The humidifier was turn on more than 4 hours	Turn on the humidifier again
	The water was plug up the spray nozzle when first use	Please use the tissue clean the water on the spray nozzle
	There has some bubbles in the water tank	please shake the machine gently

PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF, DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY.

Warranty

**LIMITED WARRANTY**

HOME EASY LTD warrants to the original consumer or purchaser this Humidifier heater ("Product") is free from defects in material or workmanship for a period of one (1) year from the date of purchase. If any such defect is discovered within the warranty period, HOME EASY LTD, at its discretion, will repair or replace the Product at no cost. This limited warranty is good only to the original purchaser of the product and effective only when used in United States.

For warranty or repair service: Call 1-844-801-8880 and choose the appropriate prompt, or email info@homeeasy.net. Please have your Product's model number, your name, address, city, state, zip code and phone number ready.

NO OTHER WARRANTY IS APPLICABLE TO THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. SOME STATES AND/OR TERRITORIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU, THE ORIGINAL PURCHASER, SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR TERRITORY TO TERRITORY.

Home Easy Ltd,  
1275 Wilcofffield Ave  
Fairfield, NJ 07004  
Toll Free:  
1-844-801-8880