

HANGING HOOK (40 PACK)

READ ALL WARNINGS AND INSTRUCTIONS IN FULL BEFORE USING

INCLUDES: 4 JUMBO HOOKS, 18 LARGE HOOKS, 18 SMALL HOOKS

WARNINGS

- This product is not a toy. Use adult supervision.
- Do not use this product for anything other than its intended use.
- Use caution when removing this product as the strong adhesive may cause some cosmetic damage to delicate surfaces when being removed.
- Weight capacity: 11 lbs (5 kg) for small hook, 18 lbs (8 kg) for large, 20 lbs (9 kg) for jumbo.
NOTE: Weight capacity may change depending on the surface to which the product is adhered.
- This product works best on a sturdy, flat, non-porous surface that has no risk of removing paint or drywall.
- It is ill-advised to use product on fragile surfaces, curved surfaces, or highly textured surfaces.
- Limit the contact the adhesive side has with dirt to help extend the life of the product.
- Do not use to hang fragile items. Do not drop items onto hanger.
- Over time and after multiple uses, the adhesive quality may degrade.
- Do not allow the adhesive side of hook to become dirty or come into contact with water as it will degrade its adhesive quality.

INSTALLATION INSTRUCTIONS

1. Choose a location to adhere the hook that is a sturdy, flat, and non-porous surface. Ensure the hook has no risk of damaging paint or drywall before attaching. Make sure surface is clean and dry before attaching.
2. Remove film backing and carefully place adhesive side of hook against surface and apply pressure (fig. 1-2). Gently pull on hook to confirm it is secure.

NOTE: Keep film backing to reapply when storing hang hook.

3. Do not overload the unit based on the weight capacity and the integrity of the surface it is adhered to. To prevent sliding or falling, do not drop objects onto the hook when loading the unit.




REMOVAL INSTRUCTIONS

1. Use a thin, stiff object (like a credit card) to slide between the hook adhesive and the surface to help release the hook.
2. Once a corner is released, gently and carefully peel hook off of surface. Do not allow the adhesive side of hook to come into contact with dirt or debris as it will degrade its adhesive quality.
3. Replace film backing on adhesive side to store and use again.

NOTE: Use caution while removing the product as more delicate surfaces may become damaged if removal is not done carefully.

CARE INSTRUCTIONS

Store in a cool, dry place with film backing on adhesive side. If the adhesive backing becomes dirty it may lose its ability to properly adhere to surfaces. Do not attempt to wash or rinse the adhesive surface as this will cause the item to lose its adhesive quality.

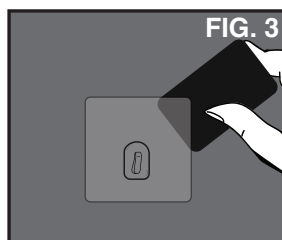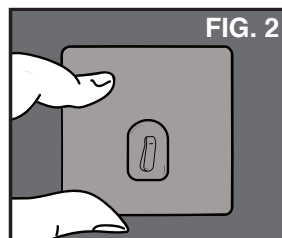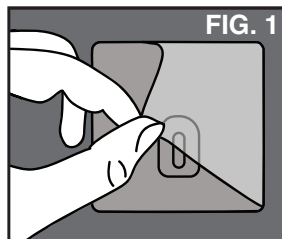



Read Instructions
Before Operating

MADE IN
CHINA



PATENT
PENDING

Rev: 050922

VIATEK.COM

**For questions, assistance, or replacement parts, do not return to your retailer. Contact Viatek® customer service below.
For refunds on items not purchased from Viatek® directly, please contact your retailer.**

VIATEK® 1-YEAR LIMITED WARRANTY

Viatek® warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Viatek® will replace the entire product or, at its option, repair or replace the defective part(s) without charge.

Contact Viatek® customer service at 888.784.2835 or at cs@viatek.com to determine whether it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt. This warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If you have any questions, or would like to learn more about Viatek®, please contact us at 888.784.2835 or at cs@viatek.com. Register your product online at viatek.com/register-your-product-warranty/

Customer Service / Le service a la clientele / Servicio al Consumidor

☎ 888.784.2835 (+1.423.402.9010) ✉ cs@viatek.com

Model:

HNGHK-40PK

DO NOT DISPOSE OF BATTERIES IN FIRE. ALWAYS DISPOSE OF BATTERIES PER LOCAL & FEDERAL GUIDELINES.

© 2022 VIATEK CONSUMER PRODUCTS GROUP, INC. All specifications are subject to change without notice. All rights reserved.