 




# Instruction Manual

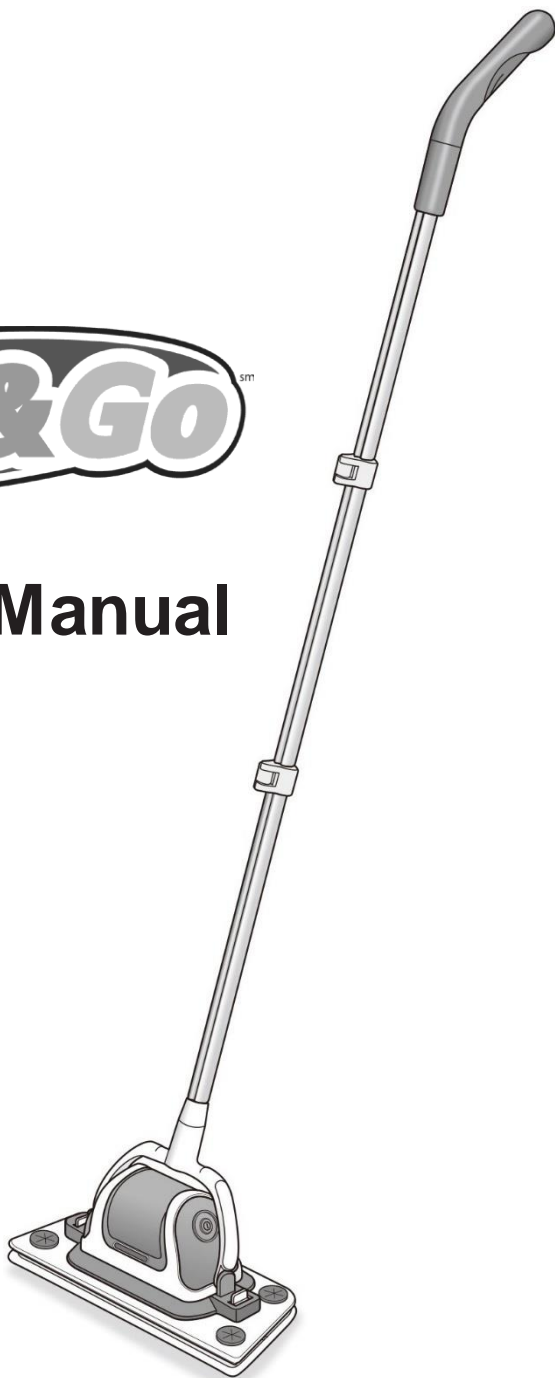

## Contents

Intended use	4
Safety instructions	4-5
Warnings & Hazards	6
Included in delivery	7
Product Overview	8
Before first use	9
Charging the battery	9
Assembly	10
Use	11
Cleaning and storage	11
Troubleshooting	12
Technical data	12
Disposal	13

## Explanation of the Symbols



Danger symbol: This symbol indicates risks of injury (e.g. from electrical current or fire). Read the associated safety instructions carefully, and comply with them.



Only use indoors!  
(Charging adapter)



Protection class II



AC Power adapter.  
polarity (power supply)



Symbol for direct current



Secure galvanic isolation



Switching power supply



Additional information



Read operating instructions  
before using!



Hand wash.



Do not bleach.



Do not tumble dry.



Do not iron.



Do not clean with chemicals.

## Explanation of the Signal Words

### DANGER

warns of serious injuries and  
danger to life

### WARNING

warns of possible serious  
injuries and danger to life

### NOTICE

warns of material damage

## Note:

Before returning the Scrub & Go should you have any questions regarding assembly, parts and or operation, please contact our Customer Service either at our email address or phone number listed below .

## Customer Service:

### Customer Service Email:

scrubngo@webcsr.info

### Customer Service Phone:

877-364-0015

## Intended Use

- This device is suitable for cleaning floors and other hard surfaces, such as tiles, parquet flooring, stone and more. It is suitable for indoor use.
- The device is intended for household use, not for commercial or industrial use.
- Use the device only as described in the instruction manual. Any other use is regarded as improper use.
- **If the product has been subjected to any damage, improper use or unauthorized repairs attempted by a non-professional, or if the product's operation is compromised in any way by either excessive wear and tear or normal wear and tear over time, then the product should not be used**

## Safety Instructions

**Warning:** When using electric appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

Prior to first operating, please read the entire manual carefully and keep it for future use. Don't attempt to operate the product until the manual has been read and fully understood.

This product is not a toy. Close supervision is required when any appliance is used by or near children. Store out of reach of children.

Do not attempt to use this charger with any other product. Do not attempt to charge this product with any other charger. Use only the charger supplied by manufacturer.

Do not charge the unit outdoors, Store the unit indoors in a clean, dry and uncluttered area where heat is not trapped and air can circulate freely.

Cleaning and user maintenance is to be carried out only by adults. No changes should be made to the interior of the product except by a qualified professional.

Keep the device and charger adapter cord out of reach **of children younger than 12 years old** and animals. Improper operation may result in injury and electric shocks.

The device must always be turned off or disconnected from the mains before assembly, disassembly, or cleaning, or when not in use.

Never immerse the device or the charging adapter in water or other liquids, and ensure that they do not fall into the water or become wet.

Do not disassemble the device. Do not make any changes to the device! If the device or the charging adapter are damaged, received a sharp blow, or been dropped or damaged in any way they must be replaced by the manufacturer, customer service or a similarly qualified body (e.g. specialist workshop) to avoid hazards.

## Safety Instructions (cont.)

- Do not abuse the cord. Do not carry the charger by the cord or yank the cord to disconnect. Grasp the charger plug and pull to disconnect. Keep charger cord away from heat and sharp edges. Do not operate the charger if the cord is frayed or damaged.
- Do not operate in the presence of explosives and/or other flammables fumes or liquids.
- If abnormal noise, smell, smoke or any other failure or breakage is found during the operation, turn off the switch and unplug it. Then contact Customer Service immediately. Do not repair by yourself.
- Always use proper eye protection when using the Scrub & Go with irritating substances. Rubber gloves are recommended.
- When changing accessories please make sure to turn off the machine first.
- Please make sure to charge the machine when in the OFF position.
- This appliance can be used by children aged from 12 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Do not use an extension cord. Plug the charger directly into a standard 120V power outlet.
- For best results, do not charge a battery when it or the air temperature is below 40°F (5°C) or above 105°F (40°C).
- Keep hair, loose clothing, and all parts of the body away from moving parts.



## DANGER – Shock Hazard

- Only charge and store in a clean, dry and uncluttered area where heat is not trapped and air can circulate freely.
- To protect against the risk of electric shock, do not put the battery charger in water or other liquid. Do not charge battery if it is wet or shows signs of corrosion.
- Should the device fall into water while charging, immediately disconnect the power supply. Do not try to pull the device out of the water while it is connected to the mains!
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Never touch the device or charging adapter with wet hands if these components are connected to the mains.
- Do not use the device outdoors, indoor use only.



## WARNING – Risk of Injury!

- **Risk of suffocation!** Keep children and animals away from packaging materials.
- **Risk of strangulation!** Make sure that the cord for the charging adapter is always out of reach of small children and animals.
- **Danger of chemical burn from battery acid!** If the battery leaks, avoid contact with the battery acid. Wear protective gloves if necessary. Should this occur, rinse the affected areas immediately with plenty of clean water and promptly seek medical attention..
- **Risk of falling!** Make sure that the connected cord for the charging adapter is not a tripping hazard.
- Do not charge or use the device if it is damaged or if the charger cord is damaged.
- If the charger is damaged in any way it cannot be repaired but must be replaced.



## WARNING – Fire Hazard

- Do not use or charge the device in rooms where there are highly flammable substances or poisonous or explosive vapors.
- Do not cover the device during operation or charging, as this could cause the device to catch fire.
- Do not store or use close to high temperatures or in any place that is not dry, clean and well-ventilated.

## NOTICE – Risk of Material and Property Damage

- Do not use or charge the device in rooms where there are highly flammable substances or poisonous or explosive vapors.
- Do not cover the device during operation or charging, as this can cause the device to catch fire.

## NOTICE – Risk of Material and Property Damage

 
 
- Only connect the charging adapter to properly installed outlets that match the technical data of the device. The socket must also be easily accessible after connection, so that the network connection can be quickly disconnected.
- Unplug the charged adapter from the outlet if a malfunction occurs as long as it is safe to do so.
- The device must be switched off when the charging adapter is inserted into or removed from the socket. When unplugging the charging adapter, always do so from the head. Never pull on the cable.
- Ensure that the cord is not crushed, kinked or laid over sharp edges, and that it does not come into contact with hot surfaces or water. Never wrap the cord tightly around the device or charging adapter (danger of cord breakage). A hazard may occur if the appliance runs over the supply cord.
- The attachments must be completely dry before they are reattached to the device after they have been cleaned.
- Protect the device and all of its accessories from sources of heat, open flames, shock, strong temperature fluctuations and persistent humidity (with the exception of the washable cloths).
- The battery may not be disassembled, thrown into fire, submerged in liquids or shorted.
- Only use original accessories from the manufacturer so as not to impair the functioning of the device and to prevent possible damage.
- Do not incinerate the battery. It could explode in a fire. A small leakage from the battery cell may occur under extreme usage, charging or temperature conditions. However if the outseal is broken, cracked or damaged and this leakage gets on your skin: wash quickly with soap and flush with plenty of clean water. If the liquid gets in the eyes, flush them immediately with clean water for ten minutes. Promptly seek medical attention.

## Included in Delivery

- Telescopic rod with handle
- Motor unit
- Adapter plate (large)
- Adapter plate (small)
- Microfiber cloth (large)
- Small catch mop
- Small nylon cloth
- Brush adapter plate
- Charging adapter
- Instruction Manual
- Brush (small)

Check the scope of delivery for completeness, and the components for transport damage. If the product is damaged, do not use the product but contact customer service immediately.

## Product Overview

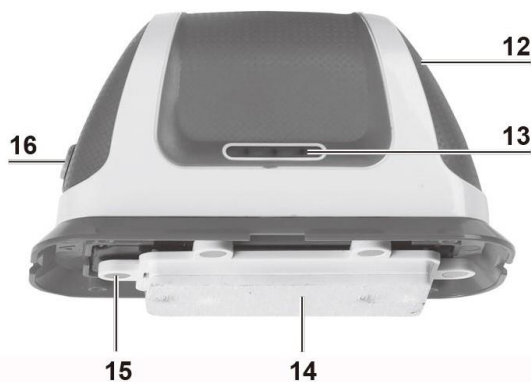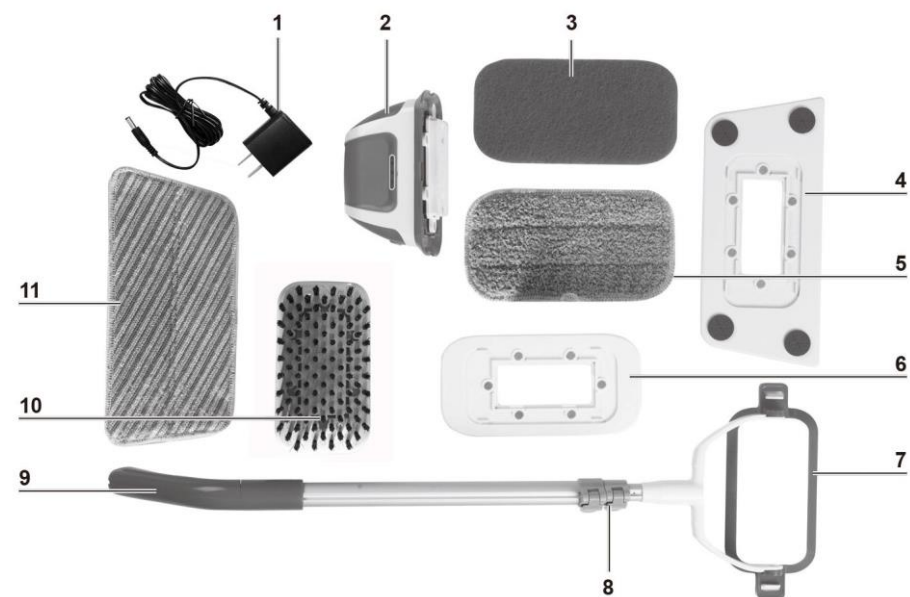

1. Charging adapter
2. Motor unit
3. Nylon cloth pad
4. Adapter plate (large)
5. Microfiber pad
6. Adapter plate (small)
7. Frame for the motor unit
8. Clamps
9. Telescopic rod w ith handle
10. Nylon Scrub Brush
11. Microfiber Mop Pad (large)
12. On / off sw itch
13. Indicator lights
14. Mount for adapter plates
15. Magnets
16. Charging socket

## Accessories

- Adapter plate (large) (4): To be used w ith the large microfiber cloth (11). Ideal for cleaning large areas of tile, w ood or stone flooring, as well as many other outdoor and indoor surfaces.
- Adapter plate (small) (6): To be used w ith the Catch mop (5) or nylon cloth (3). Ideal for cleaning edges and corners, as well as other surfaces that are difficult to reach, for example in the bathroom, kitchen or on the terrace.
- Brush adapter plate (10): Ideal for removing stubborn dirt from tile, w ood or stone flooring, as well as many other outdoor and indoor surfaces.



## Before First Use

- Before using the device, remove all transport protection or advertising. **Never remove the type plate or any warnings!**
- Charge the battery (see the chapter, "Charging the battery below").
- Remove coarse dirt from the floors and surfaces you want to clean.
- Always use rubber gloves and proper eye wear to avoid contact from splashing of soaps or detergents on skin and/or eyes while motor unit is in use.

## Charging the Battery



PLEASE NOTE!

- **Short-circuit hazard!** Do not insert conductive objects (such as a screw driver) in the charging socket.
- Remove the charging adapter from the outlet when the device is not being charged.
- The battery must be fully charged before powering on for the first time so that the maximum charge capacity can be obtained. It takes between 10 and 12 hours to charge the device for the first time.
- Do NOT exceed 12 hours of consecutive charging. Doing so may lead to shortened battery life.

- 
1. Remove the silicone plug from the charging socket (16) on the motor unit (2).
  2. Insert AC adapter into charging port.
  3. Insert the charging adapter into a properly installed, easily accessible wall outlet. The indicator lights (13) will light up one by one.
  4. Charge the battery for around 5 hours. The indicator lights will go out when the battery is fully charged.
  5. Unplug the charging adapter from the mains first, and then from the device.
  6. Reinsert the silicone plug into the charging socket

# Assembly

The motor unit (2) can be used as a handheld device as well as with the telescopic rod (9).

## Attaching/removing the telescopic rod

- Insert the motor unit into the frame (7). The safety catch must audibly lock into place on the right and left. Check to make sure that it is securely in place.
- To remove the motor unit, press the safety catch outwards. This will release the motor unit so it can be detached.

## Attaching/removing the adapter plates

 
- The motor unit (2) contains 6 magnets (15) on its underside. The adapter plates can be attached to these magnets. Simply select the adapter plate you want to use and place it on the motor unit. When doing this, make sure the arrows on the motor unit and the adapter plate are placed over one another and point towards each other.
- To remove the adapter plate, simply pull it from the motor unit.

## Attaching/removing the cloths

- Select the cloth you want to use and attach it to the corresponding adapter plate with the hook-and-loop fastener.
- To remove the cloth, hold the adapter plate and pull the cloth off.

## Attaching/removing the detachable handle from the telescopic rod

- Insert the telescopic rod into the detachable handle aligning the pin with the hole in the rod.
- To remove the detachable handle, push the pin and separate the detachable handle from the rod.

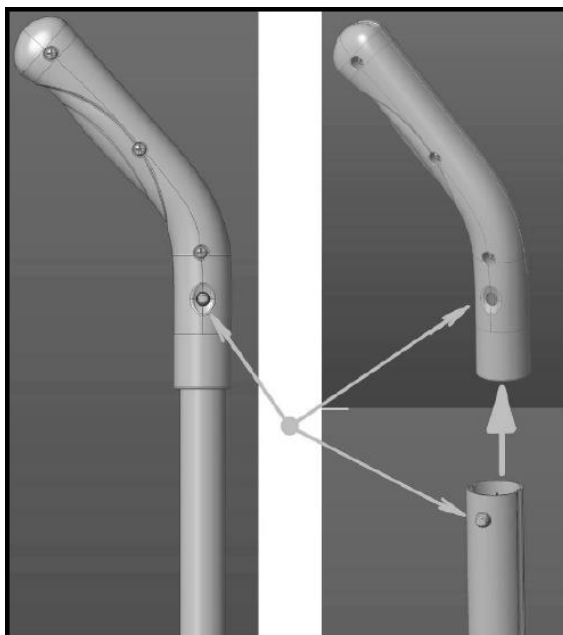

## Use



PLEASE NOTE!

- Only use the device if it has been assembled completely and correctly.
- Turn the device off before attaching or removing any accessories.
- Do not use the device if it is still connected to the charging adapter or electricity source.



Switch the device off after each cleaned surface, as this will significantly increase the operating time per battery charge.

1. Attach the accessory you want to use to the motor unit (**2**; see the “Assembly” chapter).
2. Press the on / off switch (**12**) on the motor unit to turn the device on. The mount for the adapter plates (**14**) along with the attached adapter plates will begin to vibrate.
3. Guide the device over the area to be cleaned.
4. Press the on / off switch again to turn the device off.
5. Clean the device and the accessories used after each use (see the “Cleaning and storage” chapter).

## Cleaning and Storage



PLEASE NOTE!

- Make sure that the device is turned off before cleaning it.
- Ensure that no liquids enter the motor unit when cleaning the device.
- Never use corrosive or abrasive cleaners for cleaning. They can damage the surfaces.



The cloths may become discoloured over time. This is normal and will not impact its functionality. If a cloth is damaged or worn, it must be replaced.

- If needed, clean off the motor unit (**2**), the telescopic rod (**9**) and adapter plates (**4, 6**) with a damp, soft cloth. Dry with a soft cloth.
- Regularly remove hair and lint from the nylon scrub brush (**10**) and, if needed, clean with warm water and a mild cleaning detergent. Allow to dry completely after cleaning.
- Observe the washing tags of the microfiber cloth pads (**5, 11**) when washing them. Do not use fabric softener.
- Simply tap the contents out of the nylon cloth pad when using it dry (**3**). When using it moist, clean with clear, warm water.
- Regularly check the charging adapter and its cord for damages.
- All of the parts must be completely dry before reassembling and storing.
- Store the device and accessories in a dry place away from the sun and out of reach of children and animals.

## Troubleshooting

If the device does not work properly, check if you can fix the problem yourself first. If these steps do not solve the problem, contact customer service.



**Do not try to repair an electrical device yourself!**

Problem	Possible Cause	Solution
The device works slowly or doesn't start.	The battery is drained.	Charge the battery.
The motor is too weak The adapter plates are not vibrating properly.	The battery is weak.	Charge the battery.
	The motor unit (2) is dirty.	Clean the motor unit.
The indicator light does not illuminate when the motor unit is connected to the mains.	The charging adapter is not properly connected to the motor unit and outlet.	Make sure the plug and AC Power adapter plug are properly positioned.
	The socket is defective.	Try another outlet.
	There is no mains voltage.	Check the fuse of the mains connection.
	The battery is fully charged.	Use the motor unit as usual.

## Technical Data

Article number: B-810US  
Instruction manual ID: Z 01406 M DS V1 0819

### Device

Model number: B-810US  
Power supply: 3.7 V (1 x Li-Ion battery, 2200 mAh)  
Power: 10 W (max.)  
Battery:

*Charging time:* approx. 5 hours

*Operating time:* approx. 40 minutes (when battery is fully charged)

### Charging Adapter

Model number: GQ06-050050-ZU  
Input: 100 – 240 V ~ 50 / 60 Hz, 0.4A  
Output: 5 V DC, 0.5A



## Disposal



Dispose of packaging materials in an environmentally sound way and take recyclables to collection facilities. Check with municipal codes in your area for possible special disposal instructions.



### **Customer Service/Importer:**

ZAHALO LLC  
14375 Myerlake Circle,  
Clearwater, FL 33760  
All rights reserved.

### **Exporter:**

Ningbo Brightech International Trading Co. Ltd.,  
B 518 Duoyuan Venture Building  
188 South Dongshanmen Road  
Yuyao City  
Zhejiang, China 315400