

CORDLESS • RECHARGEABLE

HOVER CLEANER™

Dual Rotating Heads!

INSTRUCTIONS



Living Room



Bathroom



Windows



Parts for your Hover Cleaner™:



Aluminum Telescopic Pole



Main Body


(Battery included inside
of the Main Body)



Battery




Battery Charger

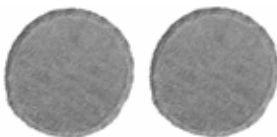

1 Set of Green Microfiber Pads -
General Cleaning



1 Set of Dark Green Scrubbing Pads
- Heavy Duty Scrubbing

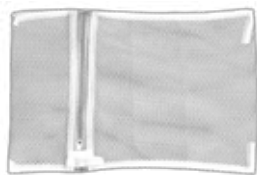

1 Mesh Washing Bag



2 Plastic Trays (Pre-Installed)



Assembly:

Step 1a:

Press in silver alignment button on handle. While button is depressed, slide the handle into the Aluminum Telescopic Pole. Make sure the depressed alignment button is lined up with the hole in the Aluminum Telescopic Pole. Slide until the alignment button snaps into the hole. Do not push past metal button and hole.




Step 1b:

Prior to plugging the power cord into the Main Body (in the next step), extend the Aluminum Telescopic Pole, by pressing & sliding up the adjustment button.



Step 2:

Depress the silver alignment button then place the Aluminum Telescopic Pole onto the end of main Body. Align the holes in the end of the pole with the silver alignment button on the main body. Push in the button and slide the pole down until the button locks into the hole on the pole. Do not push past metal button and hole.

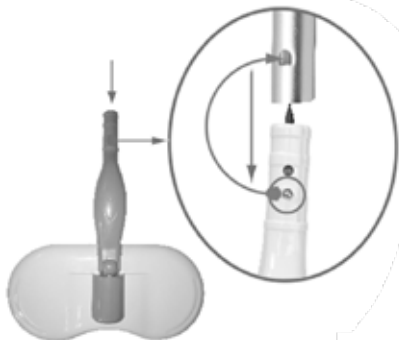

Step 3:


Center the Microfiber Pads on the Plastic Trays and attach using the Hook & Loop built into the Plastic Trays. The Plastic Trays come pre-installed in the Main Body and do not need to be removed to install or remove the microfiber pads, but if desired can be removed for cleaning.



Step 4: (Refer to images above) Plug in charge cable into the charge port slot on the Main Body. Charge battery for 3 to 4 hours prior to using. The unit will not run (power up) While charging.



Operation & Function:

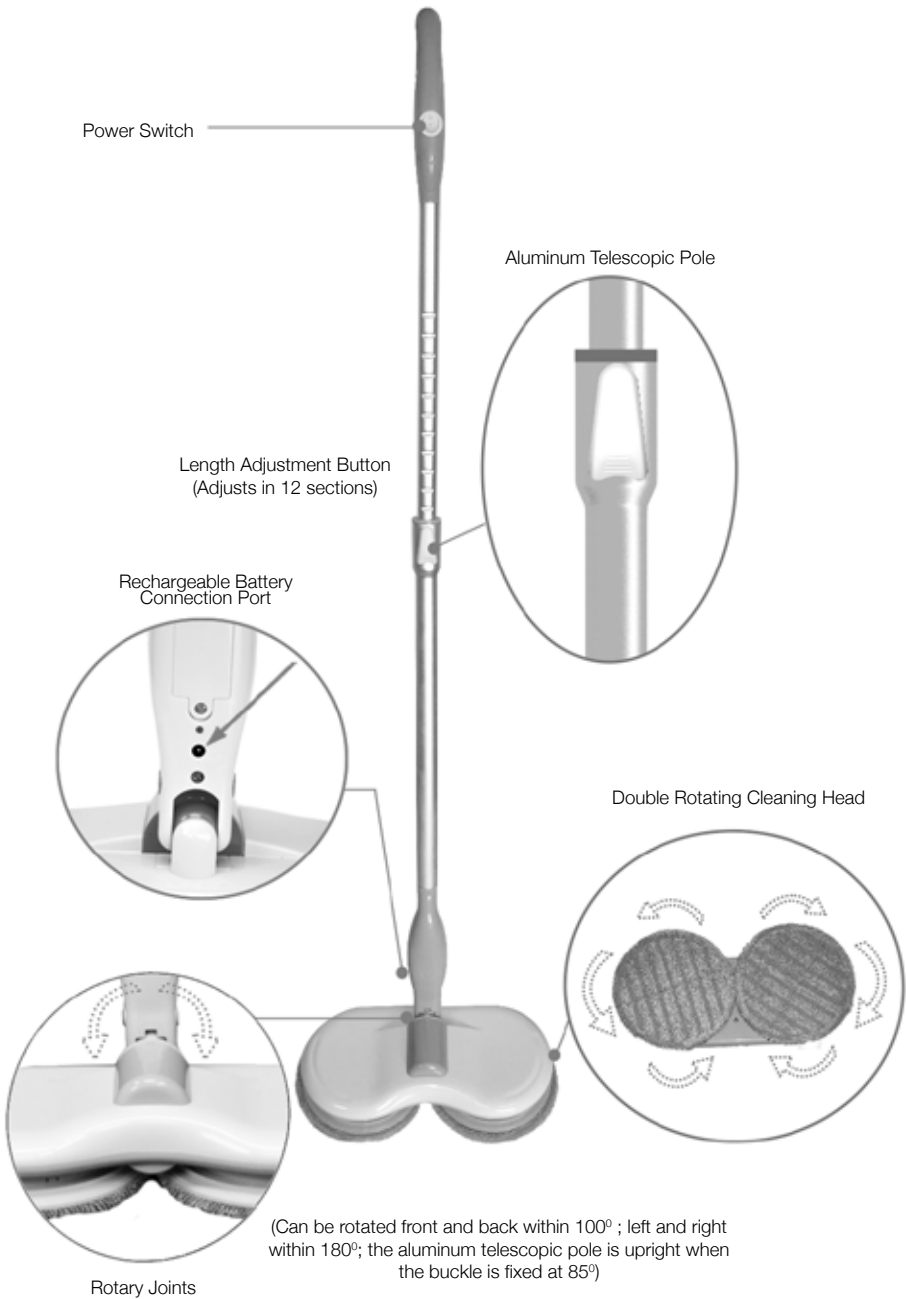

Charge & Power Protection:

1. Please turn off the power switch before charging. **Hover Cleaner™ will not run (power up) while charging.**
2. Hover Cleaner™ has circuit protection while charging.
3. Plug Battery Charger into Main Body of Hover Cleaner™ and ensure Battery Charger Plug is inserted all the way into Main Body.
4. Charge light on Main Body will glow red while battery is charging and turns off when fully charged. Charge time is approximately 4-5 hours.

How To Use:

1. To clean a surface with the Hover Cleaner, wet the microfiber pads with water or your preferred cleaning solution. The cleaning solution may be applied or sprayed directly onto the surface you are cleaning. Always refer to the cleaning solution manufacturer instruction to determine if their solution is safe to use on the surface you are cleaning.
2. Note - the Main Body of the Hover Cleaner™ cannot be submerged in water or other liquids.
3. To adjust the handle length, press the Adjustment Button and move to your desired length.
4. Clean and dry the Pads after each use.
5. a. Place the Microfiber Pads in the Mesh Washing Bag and place in the washing machine on normal cycle, let air dry.
b. Rinse the dark green scrubber pads with cool water to clean. Do not put in washing machine.

Frequently Asked Questions:

1. Q. If the Hover Cleaner™ rotates slowly or stops working.
A. It is time to recharge the battery.
2. Q. The Hover Cleaner™ rotates unevenly.
A. The Microfiber Pads are installed incorrectly.
3. Q. The Hover Cleaner™ doesn't work on a full charge.
A. Check the Electrical Connector on the end of the Main Body inside the Aluminum Telescopic Pole.
4. Q. The Hover Cleaner™ doesn't clean floor properly.
A. Replace the Microfiber Pads.
5. Q. Can I purchase replacement Microfiber Pads?
A. Yes. Call Customer Care and order at: 1+(619) 449-2392.
6. Q. Can I purchase a new Battery?
A. Yes. Call Customer Care and order at: 1+(619) 449-2392.
7. Q. When I plug in the charger the red charging light does not come on.
A. Check that your battery is securely connected, it can come loose. First unscrew the battery compartment, disconnect the battery cord, reconnect the battery cord, and re-screw on the battery compartment.
8. Q. If I apply too much pressure the heads on the Hover Cleaner™ stop rotating.
A. This can be due to low batteries or a tripped safety circuit breaker. Simply turn the unit off then back on to reset.

If your specific question or issue is not listed above, please contact Customer Care at 1+(619) 449-2392.

Do not disassemble the main body or the handle of the Hover Cleaner™ for any reason, unauthorized disassembly will void all warranties.



IMPORTANT BATTERY SAFETY INSTRUCTIONS

This product can expose you to chemicals including lead, a chemical known to the State of California to cause cancer or birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

WARNING: When using electric devices, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

WARNING:

1. Do not incinerate the battery even if it is severely damaged or is completely worn out. The battery can explode in a fire. Check with municipal codes in your area for possible special disposal instructions.
2. If liquid leaks from the battery cell, discontinue use immediately and dispose of properly.
3. Do not charge battery in rain or in wet location.
4. Use only the included battery.
5. Battery life expectancy is approximately 2 years.
6. Battery Type is: FCY 7.4V 2000Mah.
7. Contact our customer care for a replacement battery at: 1-619-449-2392.
8. Do not attempt to disassemble, remodel or destroy the battery, as it may cause battery leakage, fire, or bursting; and could also create sulfuric acid spills from the battery resulting in possible burns to person and damage to the immediate environment.
9. Charge battery using the specified charger and under the charging conditions as specified. Charging the battery under any other conditions may cause the battery to overheat, emit hydrogen gas, leak, ignite or burst.
10. When charging the battery always do so in a well ventilated area and where you can observe the charging process.
11. Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.



CORDLESS • RECHARGEABLE

HOVER CLEANER™

Dual Rotating Heads!

PLEASE READ FIRST BEFORE RETURNING

**Please call us for assistance at 1-619-449-2392
or email us at customercare@hovercleaner.com**

Our Customer Care Department is available:

Monday - Friday 8:30am to 4:00pm PST, 11:30am to 7:00pm EST

If you have any questions regarding assembly, parts, or operation, please visit our website at www.hovercleaner.com. You will find instructional videos on how to assemble and operate your Hover Cleaner™ and it will keep you up to date on our newest products. You can also email us with any questions you have at customercare@hovercleaner.com.

This product comes with a one year limited warranty against materials and workmanship.

Please review the list of accessories included with your Hover Cleaner™ on page 2. Please note, images of parts are not to scale with one another.

LIMITED ONE YEAR WARRANTY

This product has a one year limited warranty on all materials and workmanship. Hover Cleaner™ warrants the original purchaser of this product that the product will be free from manufacturing defects in workmanship and material for a period of one (1) year from the date of original purchase. If within one (1) year this product fails due to defect in material or workmanship, Hover Cleaner™ will repair, replace or supply any defective part at their option. The purchaser must contact Hover Cleaner™ and provide a description of the defective part, including digital pictures if requested, with this original purchase documentation as validation of warranty coverage. This warranty gives you specific legal rights and you may also have other rights which varies from state to state.

This warranty does not cover or apply to: (a) damage to the product due to misuse, mishandling, and abuse, (b) products not used in accordance with instructions, (c) product not assembled or installed according to instructions, and (d) normal wear and tear.

Call us for assistance at +1-619-449-2392 or you can email us at:
customercare@hovercleaner.com

Our Customer Care Department is available:

Monday - Friday 8:30am to 4:00pm PST / 11:30am - 7:00pm EST





Santee, California 92071

Email: customercare@hovercleaner.com

On the web: www.hovercleaner.com

Facebook & Pinterest: [hovercleaner](#)

Instagram: [@hovercleaner](#) Twitter: [@yrdllc](#)

© Yeiser Research & Development, LLC; 2019. All rights reserved.

Made in China

001058 HC rev 8b G2 us