

5 YEAR LIMITED WARRANTY

Your Wolfgang Puck Mixing Bowl Set is warranted to be free of defects under normal household use to the original purchaser for five years.

This warranty excludes damage caused by accident, overheating, misuse or abuse, and does not apply to scratches, stains, discoloration or other damage which does not impair the functionality of the product.

This warranty gives you specific legal rights, and you may also have other rights which may vary from state (province) to state (province).

Proof of purchase required to validate the warranty.

Shipping and handling charges may apply.

For questions or concerns please contact customer service at:

Synergy Housewares, LLC.

Toll-free: 866-444-4033

Hours: M-F 8:30am-5:00pm EST

Website: warranty.synergyhousewares.com

Printed in China

Model SWPMXB12PC

WOLFGANG PUCK

USE AND CARE

12 PIECE MIXING BOWL SET

Set Includes:

1Qt, 2Qt, 3Qt, 5Qt Covered Mixing Bowls, Stainless Steel Slicing Blade, Course Grater, Fine Grater and Silicone Bowl Scraper



Wolfgang Puck is a trademark of Wolfgang Puck Worldwide

Actual product may differ slightly from image on this page

Model SWPMXB12PC

Wolfgang Puck

12 Piece Mixing Bowl Set Use and Care

Before Your First Use

Hand wash all parts of the mixing bowl set in warm water with a mild dishwashing soap using a soft sponge or nylon pad. Rinse and dry thoroughly.

Using Your Wolfgang Puck Mixing Bowl Set

Your Wolfgang Puck Mixing Bowls are freezer and refrigerator safe.

Do not use your mixing bowls in the microwave or directly on your stovetop. This can damage the mixing bowls as well as your microwave or stovetop.

Your mixing bowls are oven safe to 400°F. The plastic covers are NOT oven safe. Do not place in the oven or near a direct heat source.

Using Your Grating/Slicing Inserts

The 5qt mixing bowl features a uniquely designed cover that allows you to grate or slice food directly into the bowl.

Fine Grater

Ideal for grating, citrus, chocolate and hard cheese like Parmesan. (Figure 1)

Coarse Grater

Use to grate larger strands of soft cheese, vegetables and even coconut. (Figure 2)

Slicing Blade

Cut even slices of cheese, fruits and vegetables such as carrots and cucumbers. (Figure 3)

- 1 Place the cover onto the 5qt mixing bowl. Remove the plastic insert located in the center of the cover by lifting up by the small tab. (Figure 4)
- 2 Carefully place your desired grating/slicing insert into the center of the cover with the blade facing up. (Figure 5)
- 3 Hold the bowl with one hand by the handle for stability and glide food across the insert with your other hand.
- 4 Lift up on the side of the grating/slicing insert by the small tab to remove it. Use extreme caution and avoid touching the sharp blade surface. (Figure 6)

Splash Guard

You can also remove the plastic insert as shown in Figure 4, add ingredients and use the cover as a splash guard to prevent splashes and splatter while using a hand mixer or immersion blender with the 5qt mixing bowl.



Figure 4



Figure 5



Figure 6



Figure 1



Figure 2



Figure 3

Using Your Mixing Bowls as a Double Boiler

The mixing bowls can be used with a small saucepan as a double boiler. To use, follow the below steps:

Step 1:

Fill the saucepan 1/4-1/3 full with water. Do not overfill as this can cause water to spill out when the mixing bowl is placed inside.

Step 2:

Place the mixing bowl on top of the saucepan so that it creates a seal with the edge of the saucepan. Please note that the water should not touch the bottom of the bowl.

Step 3:

Place your desired food, such as chocolate or cheese, inside the mixing bowl. Heat over medium heat on your stovetop. Stir periodically until melted.

Please keep the following precaution in mind when using the mixing bowls as a double boiler:

We recommend that you periodically check the saucepan to ensure that there is sufficient water remaining. Refill if necessary. DO NOT let the pan boil dry.

The mixing bowl will get extremely hot. ALWAYS exercise extreme caution when handling and use a pot holder or oven mitt at all times.

Silicone Bowl Scraper

The silicone bowl scraper features a stainless steel core which holds its shape when pressure is applied, and a pliable silicone exterior that conforms to any size bowl thoroughly removing the contents. The soft silicone won't scratch or leave marks, making it safe for nonstick cookware as well. In addition, one side is conveniently inscribed with conversion measurements in cups, ounces, tablespoons, teaspoons and milliliters. This scraper is also ideal for gently folding ingredients into a batter.

Cleaning

Your Wolfgang Puck Mixing Bowls are dishwasher safe, however hand washing is recommended to retain the original luster and shine and to prevent discoloration of the silicone base.

To clean, simply use warm water a mild dishwashing soap and a soft sponge or nylon pad. If you choose to clean in the dishwasher, place the plastic covers on the top rack only.

Do not soak in water for a long period of time. The chlorine and mineral content of your water, especially iron, can cause corrosion or discoloration.

The Bowl Scraper is recommended for hand washing only.

Removing Stains of the Stainless Steel

We recommend the use of stainless steel cleaners to remove stubborn stains from your mixing bowls, such as Bon Ami®, Cameo® or Barkeeper's Friend®.

Do not use stainless steel cleaner on the silicone base, plastic cover or Silicone Bowl Scraper.

Helpful Hints and Warnings

The grating/slicing inserts are only intended for food use. Do not use for any other purpose.

Always use extreme caution when handling the grating/slicing inserts as the blades are extremely sharp and can cause injury.