

CARE & CLEANING

This product requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact the customer service department for any unusual issues you may experience.

- 1 Always unplug the product before cleaning any parts.
- 2 Perform the cleaning cycle with clean water after every use.
- 3 Clean the outer surface of the Beverage Dispenser with a damp cloth, then wipe with a soft dry cloth. NEVER submerge the Beverage Dispenser in water or any liquid.
- 4 The Bottle Adapter Collar can be cleaned separately with warm, soapy water. The Adapter Sleeves and Silicone Tubes can be washed in warm, soapy water, or placed in the dishwasher.
- 5 Charge the battery fully before long-term storage and recharge at least once every 3 months.
- 6 Never use harsh chemical detergents, powder or scouring pads on the Beverage Dispenser.
- 7 Do not place the Beverage Dispenser in the dishwasher, this will damage internal components.
- 8 Store Beverage Dispenser in a clean, dry place.

TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Product is not dispensing liquid	Low battery	Fully charge the Beverage Dispenser and then restart.
	Blockage in internal pipes	Run the cleaning cycle on page 8 to clean the internal pipes.
Display is not lighting up	Battery is flat	Fully charge unit.
	The Pour Trigger is not fully open	Push Pour Trigger downward to open fully.

1 YEAR LIMITED WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, for this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof of purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt with date of purchase and item is also an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

- THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND CANADA AND DOES NOT COVER:**
- Damages from improper installation.
 - Defects other than manufacturing defects.
 - Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Damage from service by other than an authorized dealer or service center.
 - This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state (province) to state (province).
 - Shipping and handling charges may apply.
 - Proof of purchase is required to confirm the warranty.

CURTIS STONE PRODUCTS CUSTOMER SERVICE INFORMATION

- EMAIL product@curtisstone.com
- TOLL-FREE PHONE 1.877.822.7450
- HOURS M-F 8:00am – 4pm CT
- WARRANTY SITE <https://warranty.curtisstone.com/>
Visit our warranty site to register your Curtis Stone Products.

FoodFight Ltd. • Made in China