

Long Reach Pruner

Instructions

To Cut

Step 1: Unlock the Cutting Blade by gently squeezing the Trigger and then sliding the Safety Lock to the unlocked position. Release the Trigger. (Figure A)

Step 2: Place the stem or branch in between the blades and then squeeze the trigger to cut.

Note: To use the cut and hold feature, rotate the pruner so the Red Blade Guard is facing outward and away from the plant or tree that you are cutting. Squeeze the trigger to close the blades. Keep the trigger squeezed to hold on to the item that was just cut. Release the trigger to release the item. To cut without the hold feature, have the Red Blade Guard facing inward, toward the plant or tree that you are cutting.

To Adjust Pruner Length

Step 1: Press the Extension Button to release the extension pole from the locked position. (Figure B)

Step 2: Extend the pruner by pulling the pole out until it engages in the next locking setting.

Note: The Soft Grip can be repositioned along the pole for a comfortable grip regardless of the pruners desired length. There are 3 length settings. The Extension Button must be pressed before lengthening or shortening the pole. Be sure the button is secured in one of the 3 holes and locked into position, otherwise the cutting action may not work.

Caution

- Always use the Safety Lock to lock the pruner for storage or when not in use.
- Use caution, blades are sharp.
- Always be aware of any power lines in your work area.
- Store in a clean dry area.
- This is not a toy.
- Keep away from children.

