

PTDE954 Frequently Asked Questions

HOW LONG DOES IT TAKE TO CHARGE?

Charge time is approximately 4 hours.

THE AUTO CHANNEL SCAN IS TAKING A LONG TIME, IS THAT NORMAL?

Yes, the auto channel scan may take up to 15 minutes to discover channels.

After the initial scan, the player will remember the discovered channels.

SOME OF THE MENUS ASK FOR A PASSWORD, WHAT IS IT?

The default password for this DVD player is “000000.”

You can reset the password in the “System” menu when the player is set to ATSC mode.

DOES THIS DVD PLAYER HAVE BLUETOOTH?

Yes, this DVD player has a Bluetooth transmitter, meaning that it can connect to Bluetooth receivers, such as speakers and headphones. It cannot stream video.

I’M HAVING TROUBLE FINDING STATIONS, HOW DO I FIX THAT?

Be sure that your antenna is in an area with good reception. You may have to move the antenna around until you find a suitable location.

I’M HAVING TROUBLE USING THE REMOTE, HOW DO I FIX THAT?

Aim the remote toward the Remote Receiver on the front side of the DVD player. The remote infrared range is limited to the angle shown below.

