

A black and white photograph of a man with short, light-colored hair and a beard, smiling broadly. He is wearing a white chef's jacket with visible buttons and a dark apron with white vertical stripes. His arms are crossed over his chest. The background is a light, textured wall.

# CURTIS STONE

CARE & USAGE INSTRUCTIONS

 
TALKING  
EGG COOKER

## IMPORTANT SAFEGUARDS

**WHEN USING AN ELECTRICAL PRODUCT, ESPECIALLY AROUND CHILDREN, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING:**

- 1 Read and save all instructions.
- 2 Do not immerse the appliance, Power Cord, or plug in water or other liquids.
- 3 Before use, check that the voltage marked on the appliance matches your local power supply.
- 4 Do not use the Talking Egg Cooker if the Power Cord, Plug or the appliance is damaged.
- 5 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised by someone responsible for their safety.
- 6 Keep the appliance and its cable out of the reach of children.
- 7 Do not place the appliance on or near hot surfaces (e.g. stoves, hotplates) or combustible materials (e.g. tablecloths, curtains).
- 8 Always leave at least 4 - 6 inches of free space around the sides, back, and top of the appliance. Do not place anything on top of the appliance.
- 9 Always use the appliance on a flat, stable and heat-resistant surface.
- 10 Do not operate the appliance with an external timer or remote-control system.
- 11 Use appliance only as described in this manual.
- 12 Do not use the appliance for any purpose other than household cooking.
- 13 Do not leave the appliance unattended while in use.
- 14 During operation, hot air and steam are released from the appliance. Keep hands and face at a safe distance.
- 15 Allow the appliance to cool for at least 30 minutes before cleaning or storing.
- 16 Never let the Power Cord hang over the edge of a table or counter, or touch hot surfaces.
- 17 Always unplug after use and before cleaning.
- 18 For indoor use only.
- 19 If the appliance malfunctions, unplug it immediately. Do not attempt to repair it yourself. Contact the customer service department.
- 20 Do not use the Talking Egg Cooker if the Power Cord, Plug, or the appliance is damaged. If the supply cord is damaged, it must be replaced.
- 21 To reduce the risk of injury, do not drape Power Cord over the counter top, or table top, where it can be pulled on by children or tripped over unintentionally.
- 22 Do not operate the appliance with wet hands or while standing on a wet or damp surface.
- 23 Do not move appliance when in use.
- 24 Always turn off the appliance before unplugging it from the power outlet.
- 25 Always unplug the appliance by holding the plug, not the Power Cord. Do not wind the Power Cord around the appliance.
- 26 If the appliance falls into water, unplug it from the power outlet before attempting to retrieve it.

## PARTS & ACCESSORIES

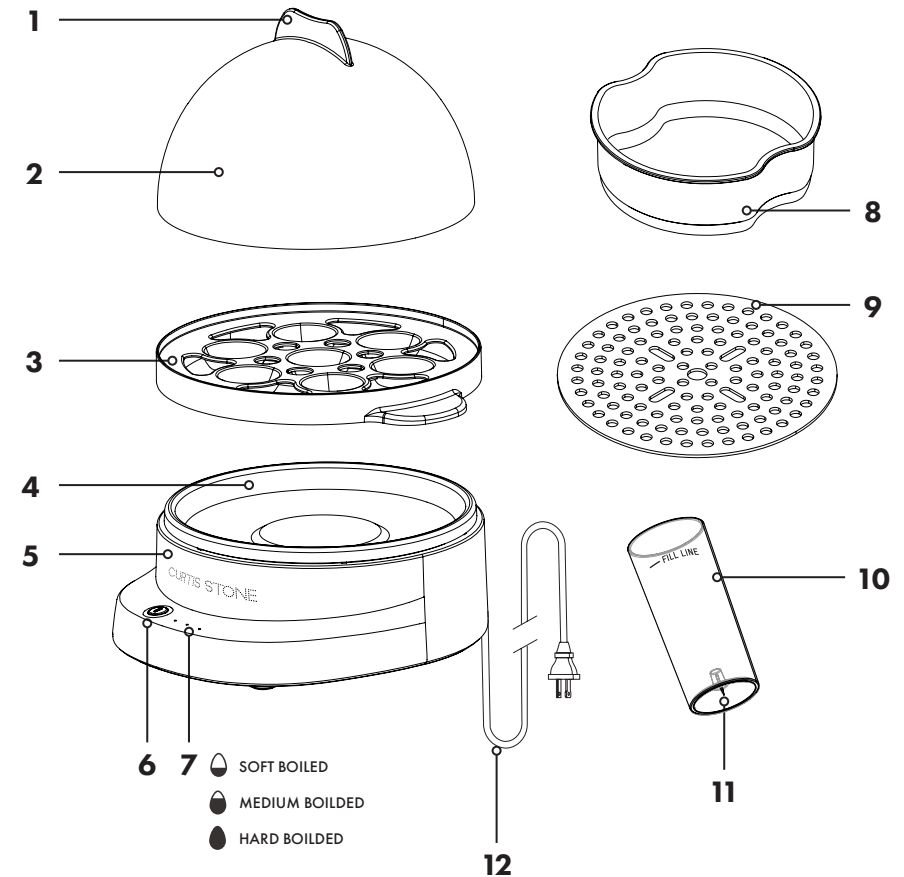

- 1 LID HANDLE
- 2 LID
- 3 EGG RACK
- 4 HEATING PLATE
- 5 HOUSING
- 6 POWER BUTTON

- 7 INDICATOR LIGHTS
- 8 OMELETTE BOWL
- 9 STEAMER TRAY
- 10 MEASURING CUP
- 11 EGG PIERCER
- 12 POWER CORD

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY  
NOT INTENDED FOR COMMERCIAL USE**

## BEFORE FIRST USE

- 1 Unpack the Talking Egg Cooker and remove all packaging materials.
- 2 Wipe down Housing with a clean, dry cloth. Wash the Egg Rack, Omelette Bowl, Steamer Tray, and Lid with warm, soapy water. Dry thoroughly.
- 3 Ensure all components are completely dry before use.

## USING YOUR TALKING EGG COOKER

- 1 Remove the Lid and Egg Rack to pour water into the Heating Plate (Figure 1).
- 2 Fill the Measuring Cup twice with water up to the Fill Line, or a total of 140mL (Figure 2).

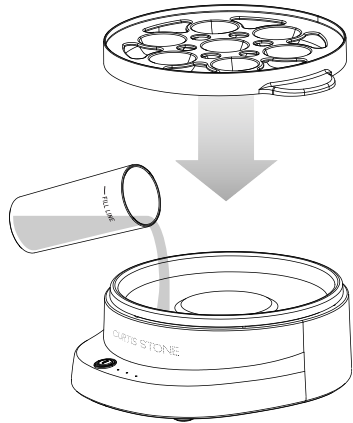 


FIGURE 1

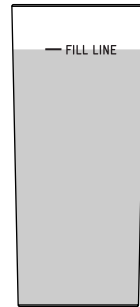 


FIGURE 2

### CAUTION

Do not overfill with water. If water exceeds the required amount, it may overflow during the cooking process. Always unplug the Talking Egg Cooker before moving and before pouring out water. Never let water run over the Power Button and Indicator Lights.

- 3 Place the Egg Rack onto the Heating Plate.
- 4 If desired, use the Egg Piercer to prick a small aperture into the wider end of each egg (Figure 3). This helps prevent the eggshells from bursting during cooking. **CAUTION:** The piercing pin is very sharp, use with extreme caution.
- 5 Put the eggs onto the Egg Rack with the wider ends of the eggs facing upwards, then close the Lid (Figure 4).
- 6 Plug in the Talking Egg Cooker.
  - Press Power Button once for Soft-Boiled eggs.
  - Press Power Button twice consecutively (within 2 seconds of each press) for Medium-Boiled eggs.
  - Press Power Button three times consecutively (within 2 seconds of each press) for Hand-Boiled eggs.

The corresponding Indicator Light will illuminate and a voice alert will be heard. The Talking Egg Cooker will start to boil the eggs. Voice alerts will sound to indicate egg doneness. Carefully remove the eggs when it reaches your desired doneness. To take eggs out, carefully remove the Lid by the Lid Handle as it is very hot.

**NOTE:** The appliance will continue to heat for 1 minute after the 4-7 eggs cooking alert has sounded, in case longer cook time is preferred. The Talking Egg Cooker will then turn off automatically.

- 7 Let the eggs cool before peeling. Press and hold Power Button to turn off. Unplug Talking Egg Cooker.

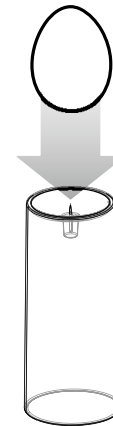 


FIGURE 3



FIGURE 4

PREFERRED EGG DONENESS

**SOFT-BOILED:** After 9 minutes, the voice alert will sound to let you know that the 1-3 eggs are now soft boiled. At the 10-minute mark, the voice alert will sound to let you know that 4-7 eggs are now soft boiled. After one minute, the appliance will then automatically turn off.

**MEDIUM-BOILED:** At the 11-minute mark, the voice alert will tell you that 1-3 eggs are now medium boiled. At the 13-minute mark, the voice alert will sound to let you know that 4-7 eggs are now medium boiled. After one minute, the appliance will then automatically turn off.

**HARD-BOILED:** At the 15-minute mark, the voice alert will tell you that 1-3 eggs are now hard boiled. At the 16-minute mark, the voice alert will sound to let you know that 4-7 eggs are now hard boiled. After one minute, the appliance will automatically turn off.

COOKING GUIDE

| DONENESS      | 1 - 3 EGGS   | 4 - 7 EGGS   |
|---------------|--------------|--------------|
|               | COOKING TIME | COOKING TIME |
| Soft-Boiled   | 9 minutes    | 10 minutes   |
| Medium-Boiled | 11 minutes   | 13 minutes   |
| Hard-Boiled   | 15 minutes   | 16 minutes   |

**NOTE:** Results may vary depending on size and temperature of eggs.

USING THE STEAMER TRAY

- 1 Remove the Lid and Egg Rack to pour water onto the Heating Plate. Fill the Measuring Cup twice with water up to the Fill Line, or a total of 140mL (Figure 5).

**CAUTION**

Do not overfill with water. If water exceeds the maximum amount, it may overflow during the cooking process.

- 2 Place the Egg Rack above the Heating Plate.
- 3 Place the Steamer Tray directly on top of the Egg Rack (Figure 6).
- 4 Add your ingredients to the Steamer. Be careful not to overcrowd the food so that the steam has space to circulate.
- 5 Cover with the Lid and press the Power Button three times consecutively to activate Hard-Boiled egg cooking setting.
- 6 The Talking Egg Cooker will run a standard Hard-Boiled egg cooking cycle. A voice alert will be heard at the 15-minute and 16-minute mark. You can use the built-in voice messages for time indication, or monitor the food yourself. To check or remove your food, carefully and quickly remove the Lid by the holding the Lid Handle, as it is very hot and steam will escape.

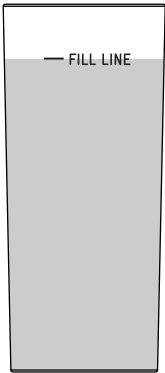 


FIGURE 5

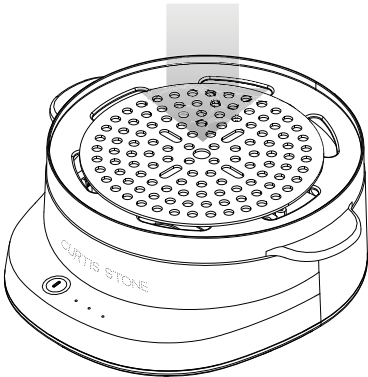 


FIGURE 6

## USING THE OMELETTE BOWL

- 1 Remove the Lid and Egg Rack to pour water onto the Heating Plate. Fill the Measuring Cup twice with water up to the Fill Line, or a total of 140mL. (Figure 7).

### CAUTION

**Do not overfill with water. If water exceeds the maximum amount, it may overflow during the cooking process.**

- 2 Place the Egg Rack above the Heating Plate.
- 3 Place the Omelette Bowl directly on top of the Egg Rack (Figure 8).
- 4 Lightly grease inside of the Omelette Bowl with oil or softened butter. Crack up to 3 eggs in a separate bowl, then whisk. Pour into the Omelette Bowl.
- 5 Cover with the Lid. If cooking 2 eggs, press Power Button once. The Soft-Boiled Indicator Light will illuminate. If cooking 3 eggs, press Power Button twice consecutively. The Medium-Boiled Indicator Light will illuminate..
- 6 The Talking Egg Cooker will run the set cooking cycle. You can use the built-in voice messages for time indication, or monitor the food yourself. 2 eggs take about 9 minutes to cook and 3 eggs take about 11 minutes to cook. You can remove the eggs after the 1-3 eggs cooking alert has sounded, or you leave longer if more cooking is required. The appliance will automatically turn off one minute after the 4-7 eggs cooking alert has sounded.
- 7 To check or remove your food, carefully and quickly remove the Lid by the holding the Lid Handle, as it is very hot and steam will escape.

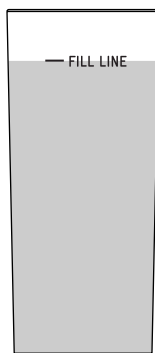 


FIGURE 7

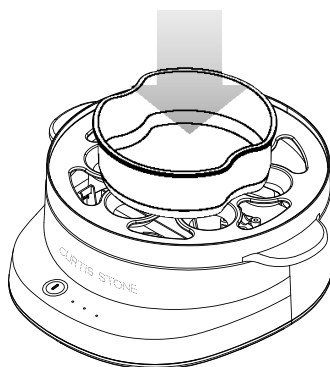 


FIGURE 8

## TIPS

- 1 Doneness timings are based on large eggs. If using medium or extra-large eggs, adjust the cooking time by about 30 seconds.
- 2 Use eggs straight from refrigerator for consistent results.
- 3 To quickly cool eggs so they can be handled, transfer cooked eggs to a bowl of cold water for about 30 seconds. This cools the shell enough to touch while keeping the interior warm.
- 4 If chilling eggs completely (like for egg salad), drop cooked eggs into ice water and leave 10 minutes to chill completely.
- 5 For easier peeling, gently tap the egg and roll it on the counter to crack the shell, then peel under running water to help separate the shell from the egg.

## CARE & CLEANING

- 1 Always unplug the Talking Egg Cooker and allow cooling before cleaning.
- 2 Wipe the Talking Egg Cooker Housing with a damp cloth. Never submerge in water.
- 3 Wash the Egg Rack, Lid, Omelette Bowl, and Steamer Tray in warm, soapy water or in the dishwasher.
- 4 Wipe the Heating Plate with a damp cloth.
- 5 Do not use abrasive cleaners, such as bleach, or steel wool.
- 6 Do not store the product while it is still damp. Ensure all components are thoroughly dry before storing.
- 7 Inspect the Power Cord regularly for signs of wear or damage. Contact Customer Service for a replacement, if required.
- 8 Store in a cool, dry place.
- 9 To remove any scale build up, dilute 1 part vinegar to 10 parts water, then pour the solution into the Heating Plate and soak for 30 minutes. Pour out the liquid and wipe the Heating Plate with a clean, moist towel.

1 YEAR LIMITED WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, for this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof of purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt with date of purchase and item is also an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND CANADA AND DOES NOT COVER:

- Damages from improper installation.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than an authorized dealer or service center.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state (province) to state (province).
- Shipping and handling charges may apply.
- Proof of purchase is required to confirm the warranty.

CURTIS STONE PRODUCTS CUSTOMER SERVICE INFORMATION

EMAIL product@curtisstone.com  
TOLL-FREE PHONE 1.877.822.7450  
HOURS M-F 8:00am – 4pm CT  
WARRANTY SITE <https://warranty.curtisstone.com/>  
Visit our warranty site to register your Curtis Stone Products.

Dura-Pan® is a registered trademark of FoodFight Ltd. • Made in China

