

CURTIS STONE



CARE & USAGE INSTRUCTIONS

PORTABLE
FOOD WARMER

IMPORTANT SAFEGUARDS

WHEN USING AN ELECTRICAL PRODUCT, ESPECIALLY AROUND CHILDREN, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING:

- 1 Read and save all instructions.
- 2 Do not immerse the Warming Base, Power Cord or Plug in water or any liquid.
- 3 Before use, check that the voltage marked on the product matches your local power supply.
- 4 Do not use the Portable Food Warmer if the Power Cord, Plug or the product is damaged.
- 5 This product is not intended for people (including children) who are physically impaired, have sensory or mental disabilities, or lack relevant experience and knowledge, unless someone responsible for their safety supervises or directs their use of the product.
- 6 Keep the product and its cable out of the reach of children.
- 7 Do not place the product on or near hot surfaces (e.g. stoves, hotplates).
- 8 Always use the Portable Food Warmer on a flat, stable and heat-resistant surface.
- 9 Do not operate the product with an external timer or remote-control system.
- 10 Use product only as described in this manual.
- 11 Allow the product to cool completely before cleaning.
- 12 Never let the Power Cord hang over the edge of a table or counter.
- 13 For indoor use only.
- 14 If the Portable Food Warmer malfunctions, unplug it immediately. Do not attempt to repair it.
- 15 **WARNING:** This product contains heating elements. Surfaces can become hot. Use caution when operating.
- 16 Touch only the designated handle and surfaces during and after heating.
- 17 Always unplug after use and allow the unit to cool for 30 minutes before handling or storing.
- 18 Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- 19 Avoid coming in contact with steam from the Steam Vent.
- 20 Never heat Warming Base in the microwave oven.
- 21 Never place Warming Base in the refrigerator or freezer.
- 22 Never plug Portable Food Warmer into power outlet when there is no food inside.
- 23 Always open the Steam Vent Release before beginning the heating cycle.
- 24 Do not use the Portable Food Warmer in an uneven or humid place.
- 25 Never move Portable Food Warmer while it is switched on.

SPECIAL CORD INSTRUCTIONS


Your Curtis Stone Portable Food Warmer is fitted with a removable, short power cord to reduce the risks resulting from becoming entangled with a longer cord.

Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the product, and the longer cord should be arranged so that it will not drape over the countertop or tabletop, where it can be tripped over unintentionally or pulled on by children.

**FOR HOUSEHOLD USE ONLY
NOT INTENDED FOR COMMERCIAL USE**

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS & ACCESSORIES

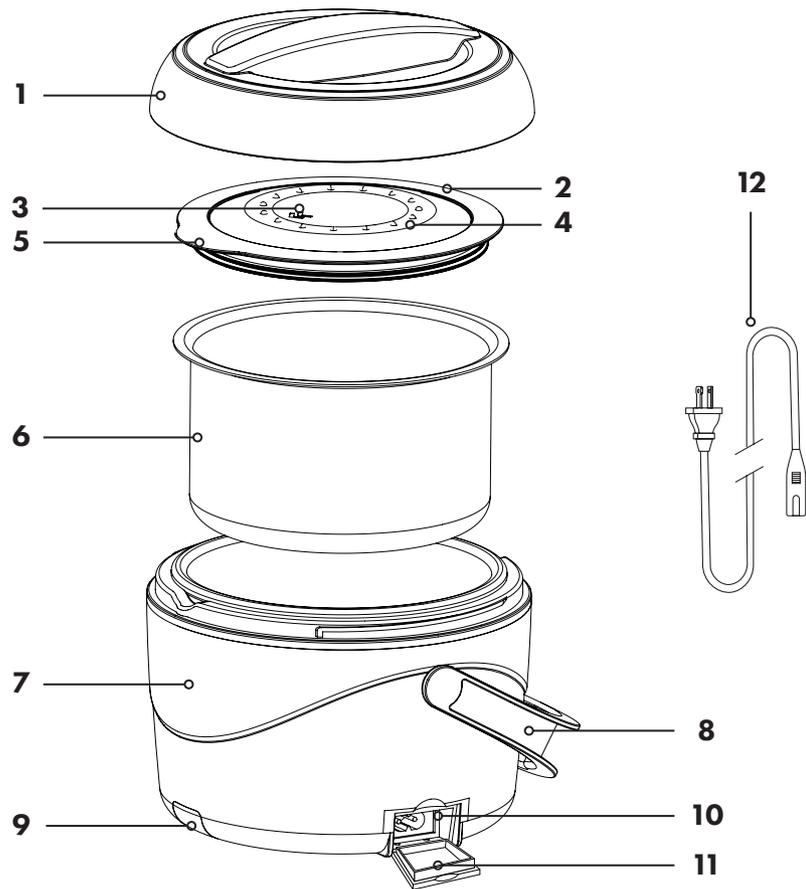

- | | |
|-----------------------------|-----------------------------------|
| 1 OUTER LID | 7 WARMING BASE |
| 2 FOOD CONTAINER LID | 8 HANDLE |
| 3 STEAM VENT RELEASE | 9 INDICATOR LIGHT |
| 4 STEAM VENT | 10 POWER CORD SOCKET |
| 5 LID TAB | 11 POWER CORD SOCKET COVER |
| 6 FOOD CONTAINER | 12 REMOVABLE POWER CORD |

BEFORE FIRST USE

- 1 Unpack the Portable Food Warmer and remove all packaging materials.
- 2 Wash the Food Container, Outer Lid and Food Container Lid with warm, soapy water. Dry thoroughly.
- 3 Wipe the Warming Base with a damp cloth. Do not immerse in water.
- 4 Ensure all components are completely dry before use.

WHEN USING THE PRODUCT FOR THE FIRST TIME, IT MAY EMIT A THIN SMOKE OR A DISTINCT ODOUR ON INITIAL USE. THIS IS NORMAL AND DOES NOT AFFECT THE PERFORMANCE OF THE PRODUCT. SOME TABLETOPS MAY NOT BE HEAT-RESISTANT. AS A SAFETY PRECAUTION, WE RECOMMEND PLACING A MAT OR TRIVET UNDER YOUR PORTABLE FOOD WARMER TO PREVENT POSSIBLE DAMAGE TO THE TABLE SURFACE.


CAUTION

The food and Food Container may get hot while heating. Use care when touching hot surfaces and when removing food to avoid burns. Use oven mitts or a kitchen towel.


USING YOUR PORTABLE FOOD WARMER

- 1 Place food into Food Container, then place Food Container inside Warming Base.
- 2 Place Food Container Lid onto Food Container. Ensure that Lid is secure.
- 3 Before heating, place Portable Food Warmer on a stable, flat surface. Press Steam Vent Release to open.

PRESS TO OPEN STEAM VENT

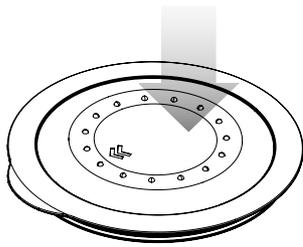


PRESS TO CLOSE STEAM VENT

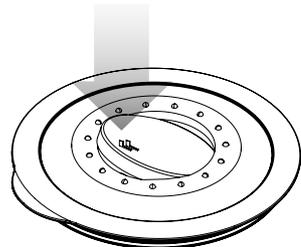

- 4 Plug Power Cord into Power Cord Socket, then plug into power outlet. Indicator Light will illuminate while product is plugged in.
- 5 To check the rewarming status of your food, use Lid Tab to remove Food Container Lid.

RAISE LID TAB TO OPEN

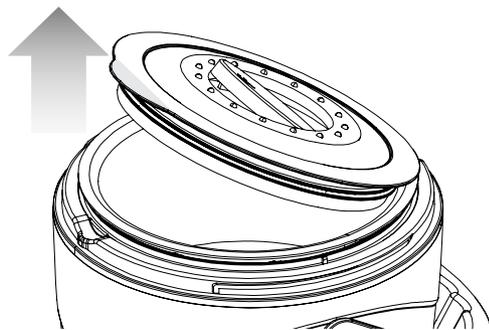

BE CAREFUL WHEN REMOVING FOOD CONTAINER LID AS FOOD CONTAINER MAY BE VERY HOT.

- 6 When heating is completed, unplug Power Cord to prevent overcooking the food.

CAUTION

The food and Food Container may get hot while heating. Use care when touching hot surfaces and when removing food to avoid burns. Use oven mitts or a kitchen towel.

HELPFUL TIPS

- 1 For faster cooking, keep the Steam Vent closed. However, when preparing soups or other dishes with a high liquid content, open the Steam Vent to release excess steam and help prevent liquid from overflowing.
- 2 Always thaw frozen foods before rewarming or cooking.
- 3 Keep the Food Container covered with the Food Container Lid during heating or when warming cooked food. Adjust Steam Vent as needed.
- 4 Cut food into smaller pieces for faster, more even heating.
- 5 Stir food occasionally throughout cooking cycle for even heating.
- 6 Heating time depends on the amount and temperature of the food.
- 7 It takes approximately 60 minutes to completely reheat your food.
- 8 When rewarming foods that do not contain a lot of liquid, like rice, pasta or oatmeal, it is recommended to add around 1-3 tablespoons of water before warming.

TROUBLESHOOTING

If your Portable Food Warmer is not working properly, check whether you are able to fix the problem yourself using the table below. If the problem cannot be fixed with the steps that are listed, contact the customer service department.

ISSUE	CAUSE	SOLUTION
The Indicator Light is not lit when switched on.	The power cord has not been plugged in.	Check the socket and power cord to ensure it is plugged in.
	The power cord is damaged.	
The Indicator Light is off.	The heating element is damaged.	Contact customer service department for maintenance.
The food temperature is still cold after heating.	Heating time is too short.	Extend the heating time.
	The starting temperature of food is too cold.	

CARE & CLEANING

This product requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact the customer service department for any unusual issues you may experience.

- 1 Always unplug and allow unit to cool completely before cleaning.
- 2 Wipe the Warming Base with a soft, damp cloth. Never submerge in water.
- 3 Wash Food Container Lid and Outer Lid in warm, soapy water. Do not place in dishwasher.
- 4 The Food Container can be washed in warm soapy water, or in the dishwasher.
- 5 Do not use abrasive cleaners, bleach, or steel wool.
- 6 Do not store the product while it is still damp. Ensure all components are thoroughly dry before storing.
- 7 Inspect the power cord regularly for signs of wear or damage. Contact Customer Service for replacement if required.
- 8 Store in a cool, dry place.

1 YEAR LIMITED WARRANTY

This warranty covers all defects in workmanship or materials in the mechanical and electrical parts, arising under normal usage and care, for this product for a period of 12 months from the date of purchase provided you are able to present a valid proof-of-purchase. A valid proof of purchase is a receipt specifying item, date purchased, and cost of item. A gift receipt with date of purchase and item is also an acceptable proof-of-purchase. Product is intended for household use only. Any commercial use voids the warranty.

This warranty covers the original retail purchaser or gift recipient. During the applicable warranty period within normal household use, we will repair or replace, at our discretion, any mechanical or electrical part which proves defective, or replace unit with a comparable model.

THIS LIMITED WARRANTY COVERS UNITS PURCHASED AND USED WITHIN THE UNITED STATES AND CANADA AND DOES NOT COVER:

- Damages from improper installation.
- Defects other than manufacturing defects.
- Damages from misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
- Damage from service by other than an authorized dealer or service center.
- This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary from state (province) to state (province).
- Shipping and handling charges may apply.
- Proof of purchase is required to confirm the warranty.

CURTIS STONE PRODUCTS CUSTOMER SERVICE INFORMATION

EMAIL product@curtisstone.com
TOLL-FREE PHONE 1.877.822.7450
HOURS M-F 8:00am – 4pm CT
WARRANTY SITE <https://warranty.curtisstone.com/>
 Visit our warranty site to register your Curtis Stone Products.

Dura-Pan® is a registered trademark of FoodFight Ltd. • Made in China

This product contains intentionally added:
STAINLESS STEEL
 Aluminum, Copper, Iron, Manganese & Manganese Compounds, Zinc, Chromium Total, Chromium Compounds, Nickel & Nickel Compounds, Phosphorus. For more information about the chemicals in this product, visit foodfight.hk/ab1200pdf

Este producto contiene añadido intencionalmente:
ACERO DE INOXIDABLE
 Aluminio, cobre, hierro, manganeso y compuestos de manganeso, zinc, cromo total, compuestos de cromo, níquel y compuestos de níquel, fósforo. Para obtener más información sobre los productos químicos de este producto, visite foodfight.hk/ab1200pdf



foodfight.hk/ab1200pdf

CURTIS STONE