

SINCE 1886
Hunter[®]

Arctic Vortex Wearable Fan Air Cleaner
Owner's Manual



English

Form #HNF1500FAN
03112025

©2025 Produced exclusively for Mindful LLC under license by
Hunter Fan Company
All rights reserved

Models:
HNF1500FAN (all colors)

READ AND SAVE THESE INSTRUCTIONS

At a Glance

Warnings & Know Your Fan

Thank you for purchasing the **Arctic Vortex Wearable Fan Air Cleaner** from Hunter® Company. Please read and save these instructions to receive the maximum benefit and performance from your fan.

READ AND SAVE THESE INSTRUCTIONS!

Important Safety Instructions:

Read all instructions before using this fan

- Use only as described in this Hunter Owner's Manual. Do not carry out any maintenance other than that shown in this manual or advised by the Hunter® Customer Service Center. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children of less than 3 years should be kept away unless continuously supervised. Children should be supervised to ensure that they do not play with the unit.
- Children under the age of 8 should only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance. Children under the age of 8 should not plug in, regulate and clean the appliance or perform user maintenance.
- Never place the unit where it may fall into a bath or other water container. Do not use or store where it may get wet or in the immediate surroundings of a bath, shower, or swimming pool.
- This appliance may have hot parts inside. Do not use in areas where petrol, paint, or flammable liquids are used or stored or where their vapors are present. Do not use in conjunction with or directly next to an air freshener or similar products.
- Do not handle any part of the unit with wet hands.
- Do not charge with a damaged charging cable or power block.
- Do not stretch or place charging cable under strain. Keep cable away from heated surfaces.
- To prevent a possible fire, do not use with any opening or exhaust blocked, and keep free of dust, lint, hair, and anything that may reduce airflow. Do not put any object into the inlet grille or the exhaust opening as this may cause an electric shock or fire, or damage the appliance.
- In order to avoid overheating and fire hazard, do not cover appliance.
- NEVER take apart, repair or modify this product. Abnormal operation may occur, and cause electric shock, fire or injury.

At a Glance

Warnings & Know Your Fan

- DO NOT insert foreign objects such as metal into the fan outlet. When in contact with parts inside fan, this can cause electric shock or injury.
- Do not place fingers into the guard or any moving part of fan.
- If fan malfunctions, stop using fan immediately.
- Turn off all controls before carrying out any maintenance.
- If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Hunter® Customer Service Center.
- Contact the Hunter® Customer Service Center when service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or filter.

WARNING: To reduce the risk of electric shock, do not expose to water or rain.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL: Always dispose the battery-operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

Operating Your Fan

Fan Operation

How the System Works:

Air is pulled into the fan through the grilles on the inside and outside of each end of the band. The air passes through a CocoCarbon® pre-filter where larger airborne particles such as dust, pet hair, and dander are trapped. The clean air is then circulated around you with a powerful, smooth airflow.

Before Using:


1. Carefully remove fan from box and remove any packaging material.
2. Charge fan by plugging in a USB-C charging cord into the charging port located on the side of the unit.

When charging, indicator light will blink. When fully charged, indicator light will remain solid.

Note: Fan can be charged with any existing USB-C chargers or with the included USB-A to USB-C cable (charging block not included). Fan comes partially charged, but it is recommended to fully charge before first use. Neck fan will take approximately ~4 hours to charge from 0%.

When battery level is low, light near the button will blink while fan is running.

Figure 1

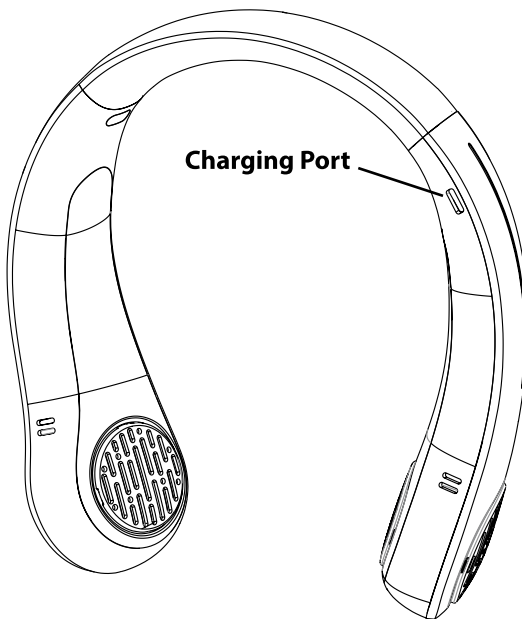

Operating Your Fan

Fan Operation

Operating the Fan:

Place fan around your neck with air vents facing up toward face and with band behind neck.

1. **Power/Speed:** Press power button to turn on fan. Continue pressing the button until the desired speed is selected. Fan speed will be low by default. Press button once more to turn off fan.

4 Fan Settings:

Press the first time; fan running on low speed.

Press the second time; fan running on medium speed.


Press the third time; fan running on high speed.

Press the fourth time; fan running on turbo speed.

2. When powerless, the **indicator light** near the button will flick to remind charging.

3. When charging status, the indicator light near the button will flash slowly; when full of charge, the indicator will stay light up.

Figure 2

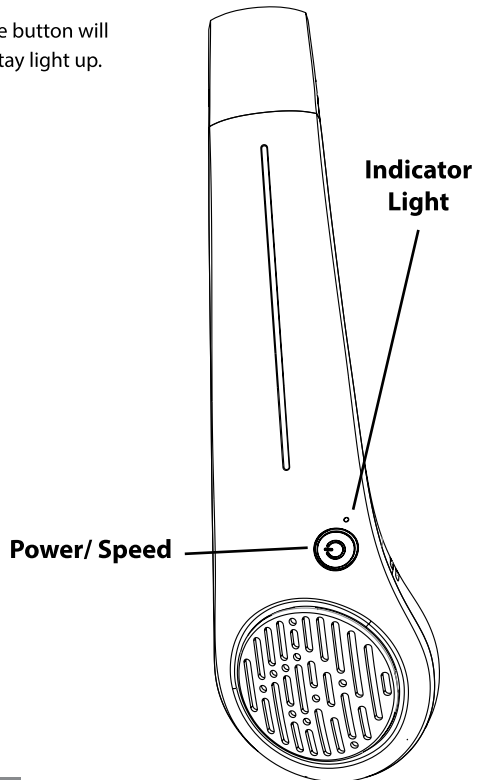

Battery Operated Running Time

Speed	Running Time
Low	~ 13.5 hours
Medium	~ 8 hours
High	~ 5 hours
Turbo	~ 3.5 hours

Maintenance

Cleaning the Fan & Filter

Cleaning the Fan:

- Use only a soft damp cloth to gently wipe the outer surfaces of the fan.
- Do not immerse the fan in water or other liquid and never allow water to drip on the motor housing.
- Do not use gasoline, paint thinner, or any other corrosive cleaning solutions to clean the fan.
- To clean between the grille, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.
- If the fan will not be in use for an extended period of time, you may leave the fan assembled. Cover to protect from dust. Store in a cool, dry place.

Cleaning the Pre-filter:

- Gently remove circular air intake grilles from sides of fan.
- Vacuum filter with vacuum's brush attachment. Hold pre-filter down to prevent being sucked into the vacuum. DO NOT use any water, liquid, or detergent to clean the pre-filter
- Align tabs on grille with body of fan, click into place.

Figure 3



Fan Assistance

Technical Support & Filter Ordering

Technical Support

If you need any assistance with setup, operation, or parts for your new Hunter® fan, please call us. Our technical support staff is ready to help!

USA/Canada: 855-887-1440
Email: info@hunterpureair.com

Hours of operation are from 8:00 AM to 6:00 PM ET, Monday through Friday. You may also contact us online at **www.hunterpureair.com**

Filter Ordering:

Lost or damaged pre-filters? Replacement pre-filters can be ordered at www.hunterpureair.com.

Model #	Part #	Type
HNF1500FAN	H-PFN1500	Replacement Prefilter 4 Pack

Fan Assistance Troubleshooting

Problem: Fan fails to operate.

If the fan shuts off unexpectedly, safety features may be activated to prevent damage or injury. If this happens, check the following:

1. Is the fan fully charged?
2. Is the fan powered ON? Press ON/OFF on fan.
3. The filter may be excessively dirty. Clean filter as needed.

Problem: Reduced Air Flow

1. The filter may be excessively dirty. Clean filter as needed.

Note: If your fan experiences any of the following problems, stop using the fan immediately and contact the Hunter® Customer Service Center toll-free (USA & Canada): 855-887-1440 OR see your warranty.

1. After fully charging, the fan still does not operate
2. Abnormal noise is observed during operation
3. Burning smell is observed
4. Motor becomes abnormally hot

WARNING: DO NOT attempt to take apart the unit by yourself. Doing so may void your warranty and cause damage to the product or personal injury.

Warranty

1 Year Limited Warranty

Mindful, LLC makes the following limited warranty to the original residential user or consumer purchaser of the Arctic Vortex Wearable Fan Air Cleaner: If any part of the wearable fan fails during the first (1) year from the date of purchase due to a defect in material or workmanship, we will provide a replacement part free of charge. If no replacement part can be provided, we will replace your wearable fan.

IN NO EVENT SHALL HUNTER COMPANY BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE FAN. YOUR SOLE REMEDY WILL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. SOME AMERICAN STATES AND CANADIAN PROVINCES DO NOT ALLOW: LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS; THE EXCLUSION OR LIMITATION OF DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES; THE EXCLUSION OR INVALIDITY OF EXPRESS OR IMPLIED WARRANTIES IF THE USER CEASES TO OWN THE FAN; THE LIMITATION OF THE REMEDIES AND RECOURSES AVAILABLE TO THE PURCHASER; OR THE INVALIDITY OF AN EXPRESS WARRANTY WHEN A PRODUCT IDENTIFIED BY BRAND NAME IS NOT USED (UNLESS SPECIFIC CONDITIONS ARE FULFILLED); SO, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

You will be responsible for insurance and freight or other transportation to our factory service center. We will return the fan freight prepaid. The fan should be properly packaged to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase. This warranty is voided if your Arctic Vortex Wearable Fan Air Cleaner is not purchased and used in the USA or Canada. This warranty excludes and does not cover defects, malfunctions, or failures of the fan which were caused by repairs by persons not authorized by us, use of parts, or accessories not authorized by us, mishandling, possession, or unreasonable use, including failure to provide reasonable and necessary maintenance. This warranty does not cover fans used in commercial applications. There are no express or implied warranties as to commercial purchasers or users.

**To request warranty service, visit www.hunterpureair.com
or call (855) - 887-1440**

Warranty

1 Year Limited Warranty

What is not covered:

- Units that are sold “as is”, are used, or sold by unauthorized resellers (an unauthorized reseller is defined as any third-party reseller who has no official relationship with Mindful LLC). Mindful LLC will have the final determination regarding who an unauthorized reseller is determined to be.
- Shipping or freight charges to return products for warranty service.
- Commercial or non-residential use or use inconsistent with the product instructions and manuals.
- Consumable parts (e.g., light bulbs, batteries, filters, etc.)
- Defects or damage resulting from accident, misuse, abuse, alteration, fire, floods, or acts of God.
- Cosmetic damage (e.g., scratches, dents, chips, and other damage to finishes), unless such damage results from defects in materials and workmanship and is reported within 30 days from date of delivery.
- Units with original, factory installed model numbers removed, altered, or not easily determined.
- Damage resulting from improper packing of products returned for warranty service.
- Replacement parts, repair labor costs and/or replacement of a “failed” **wearable fan** operated outside the United States and Canada.