


## (D)WARNING

In order to avoid injury caused by misuse, the user's Manual shall be read carefully before using the product, and the product shall be used in strict accordance with the purpose of the manual.

Thank you for using the multi-function food processor. This product is one of the series products independently developed by our company for food processing. It has unique shape, high and low design, convenient cleaning. It is a good helper for family kitchen. This product can cut many kinds of food, making you more comfortable in making food. The container of this product is food grade glass or food grade stainless steel cup, making food more healthy and sanitary.



## Component and installation drawing

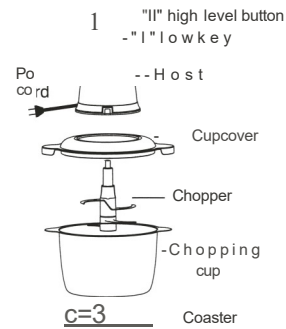

Note: the product picture is slightly different from the actual product, please refer to the actual product.

## Maintenance and maintenance

1. After use, please unplug the power plug from the power socket in time.

2. All parts can be cleaned with detergent and sponge. Do not use hard steel wire to clean so as not to damage the surface.

3. Do not immerse the whole machine in water. The outer surface of the product can only be wiped with a wet towel. Do not wash it with water to avoid leakage and failure.

4. When the product is not used for a long time, please clean it, put it in the packing box, and put it in a ventilated and dry place to avoid being affected by moisture and affecting the use.


## Analysis of common problems

Fault phenomenon	Reason	Solution
Power on does not work	The lid of the chopped cup is not closed	Cover the chopped cup
Machine shutdown during use	1. The voltage is too low; 2. Motor overload automatic stop protection	1. Check the voltage; 2. It is recommended to leave the machine for 30 minutes before starting the machine.
The motor smells bad after several times of use	Normal initial use of new motor	If there is still a bad smell after repeated use, please send Check at the maintenance point.
Abnormal vibration or noise	1. The cutter head is not installed in place. 2. Unstable product placement 3. High voltage 4. Excessive food	1. Take out the food materials and install the knife rest in place. 2. Stable product placement 3. Check whether the voltage is too high 4. Turn off the power and take out the excess food.



# INSTACHOP

## User Manual

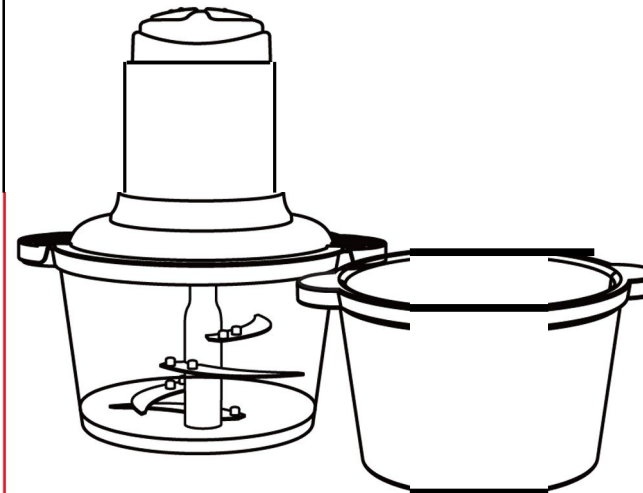

## Functional characteristics

1. Unique appearance design;
2. The "+" shape 4-piece knife design makes the mincing effect more outstanding.
3. Safety switch design, control the degree of food chopping at will, and use it safely;
4. Transparent glass / stainless steel chopped cup, healthy and sanitary, easy to clean;
5. Detachable parts, easy to clean;
6. High and low grade design, multiple choices.

## Usage method

### (-)OPERATION STEPS

**6** Before use, clean the chopping cup, chopping knife and cup cover according to the cleaning and maintenance guidelines;

**2** Take off the body and cup cover, and place the shredding in a flat, clean and dry place;

**3** Make sure that the cutter is correctly placed on the shaft in the center of the chopping cup.

**6** Refer to the food mixing guide of the chopping cup and put the appropriate food into the cup. If the position of the chopping knife deviates after the food is put into the cup, please set the position of the chopping knife to ensure that the above point can be met.

**5** Cover the cup cover, then put the body on the cup cover, check whether it is placed properly, and ensure that the body and the cutter and the cup cover are assembled in place;

**6** Plug in the power cord plug and connect the power supply;

**7** Hold the body by hand, press the switch (I or II) the machine starts to work, release the switch, and the machine stops working. The cutting time should refer to the cutting and slicing food guide. Consumers can shorten the cutting time according to their preferences for the cutting effect of food.

**BE CAREFUL!** In order to extend the service life of the product, the longest working time at a time shall not exceed 30 seconds. If the cutting is not completed after 30 seconds, please let the product rest for 2 minutes before continuing to work.

**8** After releasing the switch, please do not take off the body immediately. After the blade stops rotating, pull out the plug and cut off the power, then take off the body.

**9** Open the lid of the cup, take out the chopper first and then take out the food (the chopper is very sharp, take care not to cut hands or other parts of the human body).

## Reminder

Please do not put water or food materials higher than 50°C into the glass for processing, so as to avoid heat damage of the glass body and water leakage.

### (-)GUIDELINES FOR CHOPPING AND MIXING FOOD

In order to prolong the service life of the machine and obtain good chopping effect, please refer to the following "chopping and mixing food guide" for correct use.



food	weight	Longest time of chopping and mixing	Remarks
BEEF/ PORK	< 300g (cut into about 20x20x50mm small pieces first)	30s	Need to remove bone, skin and tendons Using the high gear switch
GARLIC	300g	15s	Using the low switch
CHILI PEPPERS	300g	15s	Using the low switch
CARROT	< 300g (cut into about 20x20x20mm small pieces first)	15s	Using the low switch
CELERY	300g	15s	Using the low switch

## Reminder

After use, add a small amount of warm water into the chopping cup, and then add some detergent. After starting the machine for more than ten seconds, it can be easily cleaned.

## Matters needing attention

1. Do not use power supply other than AC 120V, otherwise there is a risk of electric shock or fire.
2. Hold the power cord plug by hand and insert the power cord plug into the power socket smoothly.
3. Hold the power cord plug by hand, and pull the power cord plug out of the power plug socket smoothly.
4. Do not use iron hard objects to scratch the machine.
5. After the machine is used, the power cord plug must be pulled out, otherwise electric shock, electric leakage and fire may occur.
6. This product can not be used to process hard things, such as meat with bones, coffee beans, pepper, pepper, ice or frozen food.
7. The temperature range of chopping: 0-50°C, it is strictly prohibited to put the chopping cup into the microwave oven for heating, or put something beyond its temperature range in the cup.
8. Before adding food, please check whether the blade is installed in place and operates freely. If the blade cannot rotate or rotates slowly, please pull out the plug first and check.
9. After adding food, please check whether the chopper deviates from the correct position. If the blade fails to operate quickly within a few seconds, please unplug the plug first, level or take out too much food, and then continue to power on.
10. The blade is very sharp, please do not touch the blade directly with your hand, and hold the knife bar on the blade when removing and installing.
11. The continuous working time of the product shall not exceed 30 seconds. After 30 seconds of continuous working, the product can only be used after 2 minutes of rest. Take the 30 second interval of 2 minutes as a cycle, and work for 3 consecutive cycles. The interval must be 15 minutes, and then work after the motor cools down.
12. If the power cord is damaged, in order to avoid danger, it must be replaced by professionals from the manufacturer, its maintenance department or similar departments.
13. The blade of the machine is sharp. Be careful when taking out the blade, emptying the mixing basin and cleaning.
14. If the product stops working during operation, it may be caused by temperature control protection of the motor, please turn off the power supply and wait for cooling for 20-30 minutes before using.
15. The product should be stored in a place where children's voice cannot be touched. Do not let people (including children) who are not physically sound, feel or mentally handicapped or lack relevant experience and knowledge use or play with the product.

Thank you for choosing us!

Love and passion for beauty!



Quickly register your product at [www.ICIA.com](http://www.ICIA.com) to secure your

**1-Year Warranty**

Any questions about this product, please don't hesitate to contact us.

[Sales.IgiaNY@gmail.com](mailto:Sales.IgiaNY@gmail.com)