

# Illuminated Ornaments

## Instructions

### Before First Use:

- Remove the battery protective tab from the battery compartment on the base of each ornament.

### To Use:

- Turn the switch to COLOR for color changing lights.
- Turn the switch to WHITE for white lights.
- Turn the switch to OFF for no lights.



**NOTE:** These ornaments have a built-in 4-hour timer. Each ornament will stay lit for 4 hours. After 4 hours, it will automatically turn OFF. The lights will remain off for 20 hours and will automatically turn on for another 4 hours.

### Replacing the Batteries:

- Each ornament requires a CR2450 button cell battery. Open the battery compartment located on the base of each ornament, remove the old battery and replace with a new a CR2450 button cell battery. Be sure to install the replacement battery according to the proper polarity. Place the battery under the metal tab with the positive (+) side of the battery facing upward. Replace the battery compartment cover.

### Warning:

- These ornaments are made with glass. Take care when unpacking and storing.
- This is not a toy and is not recommended for use by children.
- This item is intended for indoor use only.

Made in China