



PIZZA GRILL™



Owner's Manual

Save These Instructions – For Household Use Only

MODEL: SB-PB-01

When using baking appliances, basic safety precautions should always be followed. Do not use the ***Emeril Pizza Grill™*** until you have read this manual thoroughly.

Visit **TristarCares.com** for tutorial videos, product details, and more. *Guarantee Information Inside*

Emeril Lagasse Pizza Grill™

BEFORE YOU BEGIN

The *Emeril Lagasse Pizza Grill*™ will provide you many years of delicious family meals and memories around the dinner table. But before you begin, it's very important that you read this entire manual, making certain that you are totally familiar with this appliance's operation and precautions.

Technical Specifications

Model Number	Unit Dimensions	Weight	Pizza Stone	Capacity	Internal Temperature
SB-PB-01	18" (W) x 14" (D) x 5" (H)	11.6 lb.	13.3 in. x 11 in.	11 in. pizza	up to 750° F/399° C

Table of Contents

<i>IMPORTANT SAFEGUARDS</i>	<i>4</i>
------------------------------------	-----------------

<i>Parts & Accessories</i>	<i>6</i>
---------------------------------------	-----------------

<i>General Operating Instructions</i>	<i>8</i>
--	-----------------

<i>Care & Cleaning</i>	<i>10</i>
-----------------------------------	------------------

<i>Money-Back Guarantee</i>	<i>11</i>
------------------------------------	------------------

IMPORTANT SAFEGUARDS

WARNING

PREVENT INJURIES! CAREFULLY READ ALL INSTRUCTIONS BEFORE USE!

1. This appliance is intended exclusively for baking pizzas and certain foods, such as the ones found in the recipe book that came with your appliance. It is used exclusively for processing food. Any treatment or processing of substances other than foodstuffs, such as building materials, paints, or chemical substances, is not permitted.
2. The appliance may only be used with a suitable grilling device or on the stove top.
3. This appliance is intended for normal household use only. It is not intended for use in commercial or retail environments.
4. If the appliance is used improperly or for professional or semiprofessional purposes or if it is not used according to the instructions in the user manual, the guarantee becomes invalid and Tristar will not be held liable for damages. Do not use this appliance if the appliance is damaged in any way.
5. Close supervision is necessary when any appliance is used near children.
6. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities or a lack of experience and knowledge unless they are under the supervision of a responsible person or have been given proper instruction in using the appliance.
7. **CAUTION:** Accessible parts become very hot. Keep children away.
8. Do not operate the appliance on or near combustible materials, such as tablecloths, paper towels, or curtains. Never cover the appliance with a blanket or other flammable objects.
9. Do not move the appliance when it is in use.
10. Do not modify this appliance in any way.
11. This appliance becomes hot during use. Wear oven mitts when handling hot components or touching hot surfaces.
12. Before first use, heat the appliance at the maximum set temperature for 15 minutes to allow the appliance to burn off the manufacturer's protective coating of oil. Wipe the appliance with warm, soapy water and a washcloth after this burn-in cycle.
13. Never operate the appliance unattended.
14. Follow all safeguards, warnings and cautions associated with the grill or stove.
15. Do not turn on or preheat the grill or stove before placing the appliance on the grill or stove.
16. When using this appliance on a grill, only use a properly maintained, well-ventilated outdoor grill with the lid fully opened at all times.
17. Use only appropriate bakeware or utensils while baking and cleaning your appliance. Do not use plastic, silicone, or glass.
18. Do not allow food other than pizza or bread dough to touch the pizza stone. Any foods that contain fat, oil, or butter (meats, items coated with olive oil, cookies, biscuits, etc.) should not touch the stone directly. These foods should be baked in a metal baking pan,

IMPORTANT SAFEGUARDS

on a metal baking sheet, or in a cast-iron skillet because the stone will absorb the fat, oil, or butter, which can cause smoking, odors, staining and which can impart rancid flavors to items that you bake in the future.


- 19.** Darkening of the stone from ingredients or excess flour will occur over time and will not affect the baking performance of the appliance.
- 20.** If your grill includes a hot plate (griddle), remove it before use and center the remaining section of the open grill plate in the grill and place the appliance on top.

- 21.** When using this appliance on a grill, place the appliance on the cooking grate of the grill while leaving at least ½ inch (12.7mm) of space between the front edge of the appliance and the front edge of the cooking grate of the grill and at least 1 inch (25.4mm) of space between both side edges of the appliance and both side edges of the cooking grate. Failure to leave enough space may result in restricted airflow and improper ventilation for your grill, which could result in serious injury or property damage.

SAVE THESE INSTRUCTIONS – FOR HOUSEHOLD USE ONLY

Parts & Accessories

IMPORTANT: Your appliance has been shipped with the components shown below. Check everything carefully before use. If any part is missing or damaged, do not use this product and contact customer service using the number on the back of this manual.

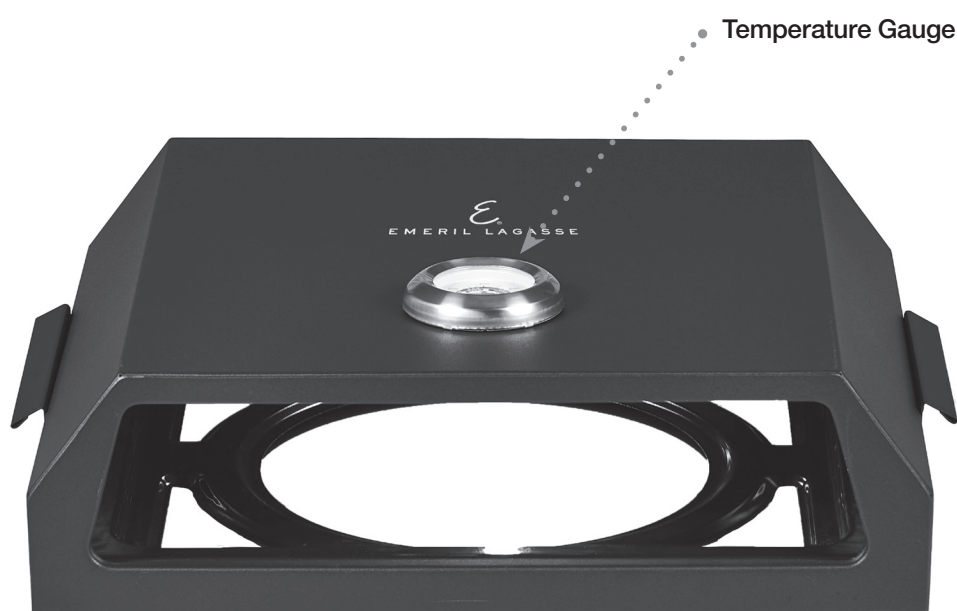

MAIN UNIT



FRONT COVER



PIZZA STONE

Parts & Accessories

NOTE: Unpack all listed contents from the packaging. Contents vary by model.
Please remove any clear or blue protective film on the components before use.
Some accessories may not be included with purchase.



PIZZA PEEL



GRILL PLATE*



PIZZA CUTTER

*May be sold separately.



WARNING:

Risk of burning! Wear BBQ gloves and appropriate clothing.



WARNING:

Blades and other metal parts used with this appliance are sharp. Great care should be taken to avoid personal injury.

General Operating Instructions

Before First Use

1. Read all materials, warning stickers, and labels.
2. Wash all parts and accessories with warm, soapy water. Handwashing is recommended. Wipe the Pizza Stone down with a damp cloth.
3. Place the Pizza Stone on the enameled fixing plate inside the appliance.
4. Preheat the appliance at the maximum set temperature for 15 minutes to allow the appliance to burn off the manufacturer's protective coating of oil. Wipe the appliance with warm, soapy water and a washcloth after this burn-in cycle.



Assembling the Grill Plate*

The Grill Plate Handle can be used with the Grill Plate. Simply slide the handle into the slot in the Grill Plate and lock the handle into place before use.

*May be sold separately.



General Operating Instructions

Using the Pizza Stone

1. Place the appliance on a gas or charcoal grill or on a gas stove top. Place the Pizza Stone in the appliance.
2. Turn on the grill or stove top and heat the appliance to the desired temperature. Use the Temperature Gauge on top of the appliance to monitor the temperature.
3. When the appliance has reached your desired temperature, place your uncooked pizza on the Pizza Peel. Use the Pizza Peel to slide the pizza onto the Pizza Stone inside the appliance. Then, remove the Pizza Peel.
4. Use the Front Cover to cover the front of the appliance.
5. After 5 minutes, check the doneness of your pizza. When the desired doneness is reached, use the Pizza Peel to remove the pizza and enjoy.



Fig. 2



Fig. 3

Using the Grill Plate

1. Place the appliance on a gas or charcoal grill or on a gas stove top. Place the Grill Plate in the appliance.
2. Turn on the grill or stove top and heat the appliance to the desired temperature. Use the Temperature Gauge on top of the appliance to monitor the temperature.
3. When the appliance has reached your desired temperature, place your food on the Grill Plate.
4. Use the Front Cover to cover the front of the appliance.
5. After 5 minutes, check the doneness of your food. When the desired doneness is reached, carefully remove the food and enjoy.

NOTE: If you are using this appliance on a gas or charcoal grill, be sure to follow the grill manufacturer's instructions pertaining to use of the grill.

Care & Cleaning

Cleaning the Pizza Stone

1. The Pizza Stone is sensitive to extreme temperature changes.
2. Do not use cold water to cool a hot stone.
3. Preheat the appliance with the Pizza Stone inside the appliance to heat the stone gradually.
4. Do not remove the Pizza Stone from the appliance when hot.
5. To prevent pizza dough from sticking to the surface of the Pizza Stone, use cornmeal, semolina, or fine polenta.
6. Do not cut food on the Pizza Stone. Do not use oil to cure the Pizza Stone. Repeated use will season the stone naturally with oils from food.
7. Wipe off the Pizza Stone with a damp cloth to remove any food particles. Routinely scrape off baked-on food with a plastic spatula or dry brush.
8. Do not use detergents or scouring agents on the Pizza Stone because these can penetrate into the stone and impair the baking result the next time you use it.
9. Never clean the Pizza Stone in the dishwasher. Do not wash the Pizza Stone with soap or submerge the stone in water.
10. A well-used Pizza Stone typically has many dark, discolored areas. Do not try to scrub the stone to make it look new. This is a natural occurrence and it does not imply that the stone needs to be replaced.

Cleaning the Appliance

1. Allow all components to cool before washing. Never use cold water to cool the Pizza Stone.
2. Wipe down surfaces with a damp, soapy washcloth or sponge. Do not use sharp objects or abrasive cleaning agents.
3. Flour residue can be wiped off with a damp cloth.



PIZZA GRILL™

90-Day Money-Back Guarantee

The *Emeril Lagasse Pizza Grill* is covered by a 90-day money-back guarantee. If you are not 100% satisfied with your product, return the product and request a replacement product or refund. Proof of purchase is required. Refunds will include the purchase price, less processing and handling. Follow the instructions in the Return Policy below to request a replacement or refund.

Replacement Guarantee Policy

Our products, when purchased from an authorized retailer, include a 1-year replacement guarantee if your product or component part does not perform as expected, the guarantee extends only to the original purchaser and is not transferable. If you experience an issue with one of our products within 1 year of purchase, return the product or the component part for replacement with a functionally equivalent new product or part. The original proof of purchase is required, and you are responsible to pay to return the unit to us. In the event a replacement unit is issued, the guarantee coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing guarantee, whichever is later. Tristar reserves the right to replace the unit with one of equal or greater value.

Return Policy

If, for any reason, you would like to replace or return the product under the money-back guarantee, your order number can be used as the return merchandise authorization number (RMA). If the product was purchased in a retail store, return the product to the store or use "RETAIL" as the RMA. Return your product to the address provided below for a replacement, which will incur no additional processing and handling fees, or for the refund of your purchase price, less processing and handling. You are responsible for the cost of returning the product. You can locate your order number at www.customerstatus.com. You can call customer service at 973-287-5178 or email info@tvcustomerinfo.com for any additional questions. Pack the product carefully and include in the package a note with (1) your name, (2) mailing address, (3) phone number, (4) email address, (5) reason for return, and (6) proof of purchase or order number, and (7) specify on the note whether you are requesting a refund or replacement. Write the RMA on the outside of the package.

Send the product to the following return address:

Emeril Lagasse Pizza Grill
Tristar Products
500 Returns Road
Wallingford, CT 06495

If the replacement or refund request has not been acknowledged after two weeks, please contact Customer Service at 973-287-5178.

Refund

Refunds requested within the money-back guarantee timeframe will be issued to the payment method used at purchase if the item was purchased directly from Tristar. If the item was purchased from an authorized retailer, proof of purchase is required, and a check will be issued for the item and sales tax amount. Processing and handling fees are non-refundable.



PIZZA GRILL™

We are very proud of the design and quality of our
Emeril Lagasse Pizza Grill™.

This product has been manufactured to the highest standards.
Should you have any questions, our friendly customer service staff
is here to help you.

For parts, recipes, accessories, and everything
Emeril Everyday, go to tristarcares.com or scan this QR code
with your smartphone or tablet:



To contact us, email us at
customerservice@tristarproductsinc.com
or call us at **973-287-5178**.



Distributed by Tristar Products, Inc. • Fairfield, NJ 07004 • © 2020 Tristar Products, Inc. • Made in China

EMERIL-PZG_IB_TP_ENG_V1_201112