

1 YEAR LIMITED WARRANTY

Your Wolfgang Puck Adjustable Spice Mill is warranted to be free of defects under normal household use for a period of one year from the date of original purchase to the original purchaser.

This warranty excludes damage caused by negligence, misuse or abuse, and does not apply to scratches, cracks, discoloration, or other damage which does not impair the functionality of the mill.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Proof of purchase is required to validate the warranty.

Shipping and handling charges may apply.

For questions or concerns please contact customer service at:

W.P. Productions, Inc. • P.O. Box 3150 • Hallandale, FL 33008

Toll-free: 800-275-8273 • Hours: M - F 8:30am - 5:00pm EST
www.wphousewares.com • Printed in China

WOLFGANG PUCK

USE AND CARE

ADJUSTABLE SPICE MILL



*Available in Copper, Stainless Steel,
Red, Rose Gold, Titanium, White,
Dark Green & Champagne*

Wolfgang Puck


Adjustable Spice Mill Use and Care

How to Load the Batteries in Your Wolfgang Puck Spice Mill

Step 1:
The batteries load into a chamber located on the top of the mill. There are lock symbols on the backside of the mill that indicate the locked and unlocked position. To open the battery compartment, hold the mill body (B) and turn the top of the mill (A) counterclockwise until the top arrow is aligned with the unlock symbol. Remove the top from the mill body.

Step 2:
The battery charges are clearly marked on the top and bottom of each battery slot. Insert the batteries into the slots, correctly matching the charge signs on the batteries to those indicated on the unit.

Step 3:
Place the top of the mill (A) back on the mill, aligning the top arrow with the unlock symbol. Holding the mill body (B), turn the top of the mill clockwise. The top arrow will shift to the left lock symbol indicating the mill is locked.

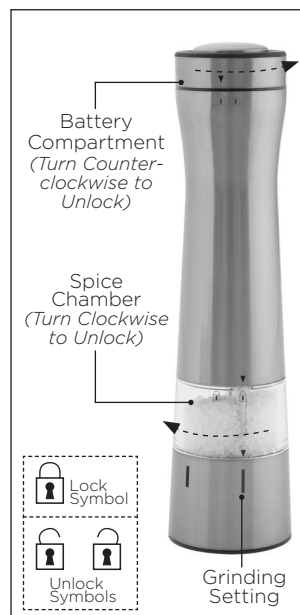

How to Fill Your Wolfgang Puck Spice Mill

Step 1:
The spice chamber can be filled with a variety of spices such as sea salt, peppercorns, red pepper flakes and coarse sugar, etc. There are lock symbols located on the backside of the mill that indicate the locked and unlocked position. To open, hold the spice chamber (D) and turn the mill body (B) clockwise until the arrow is aligned with the unlock symbol. Remove the body from the chamber.

Step 2:
Fill the spice chamber (D) with your desired spices approximately 80% full (right below the lock symbols). Figure 1

Step 3:
Reposition the mill body (B) onto the spice chamber (D) aligning the arrow with the unlock symbol. Make sure the contact points (E) on the mill body fit exactly over the contact surface (F) on the chamber. Figure 2

Step 4:
Hold the spice chamber (D) and turn the mill body (B) counterclockwise. The arrow will shift to the right lock symbol indicating the mill is locked.



How to Use Your Wolfgang Puck Spice Mill

Step 1:
The mill features 6 adjustable grinding settings. Each setting is denoted by a line on the base (C). The size of the line directly corresponds with the grinding size.

Coarse: Long Line

Fine: Short Line

Step 2:
To adjust the grind, turn the base (C) and align the arrow on spice chamber (D) with your desired grinding setting. Figure 3

The base is not designed to turn a full 360°. Forcing the base in the wrong direction can cause the grinder to jam.

Step 3:
Push the top button (G) to activate the mill.

Cleaning

To clean your Wolfgang Puck Spice Mill, wipe with a damp cloth or sponge.

Do not use harsh cleaners or abrasive cleaning pads as this may damage the finish on your mill.

Do not submerge the mill in water or let the battery compartment come in contact with water.

Helpful Hints & Warnings

In the event that spices become stuck in the grinder, turn to the coarse setting and push the top button (G) until they release.

If the mill is not working properly check the batteries. DO NOT mix old and new batteries. Replace all batteries at the same time.

DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

DO NOT drop or hit the mill against a hard object. This can cause the mill to malfunction or stop working completely.

Your Wolfgang Puck Spice Mill is NOT a toy and should be kept out of the reach of small children.



Figure 1



Figure 2



Figure 3