 


PULL LIGHT™

READ ALL INSTRUCTIONS AND WARNING BEFORE OPERATING

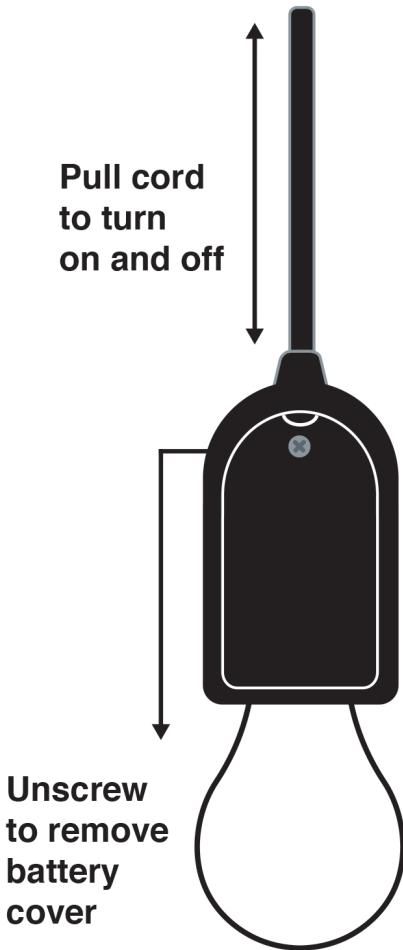

BATTERY INSTALLATION

LOOSEN SCREW AND REMOVE COVER



INSERT (3) AAA BATTERIES



REPLACE COVER AND TIGHTEN SCREW



TOOLS NEEDED (NOT INCLUDED)



SCREWDRIVER

Care:

The pull light is weather-resistant, but not waterproof. Do not leave outside during extreme weather. Do not submerge in water.

If necessary, wipe pull light clean with a damp, soft cloth.

Remove batteries before longterm storage.


Warning: When using outdoors, hang in a dry location and do not use in damp or extreme temperature conditions.

USING THE REMOTE

THE PULL LIGHT MUST BE MANUALLY TURNED ON TO USE WITH THE REMOTE (see Manual Operation section).



Before first use, pull the plastic battery strip from the remote to activate battery.

The remote sensor is inside the bulb, on the underside of the battery compartment (fig. 9). Therefore, it is best to aim the remote up towards the light rather than down from above. Otherwise, the sensor may not receive the remote signal. The remote can control the light from up to 15 feet away.

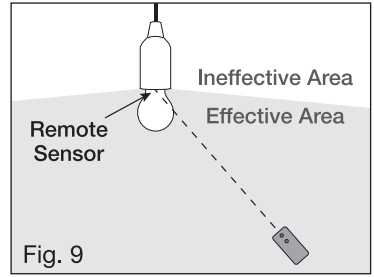



REPLACING REMOTE BATTERY

Using your fingernails, slide battery tray tab to the right and slide tray out in a downward motion to remove from remote (fig. 10). Recycle old battery and replace with new CR2025 button cell battery. Be sure to install new battery into battery tray according to correct polarity (fig. 11). Reinsert battery tray.

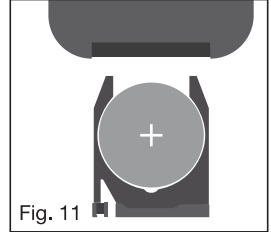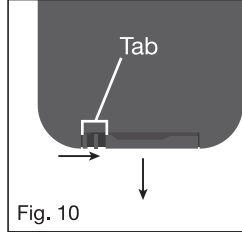

WARNINGS

 - Keep batteries out of reach of children.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-Mh, etc.) batteries.
- Do not expose batteries to extreme heat.
- Please recycle old batteries. Do not dispose with other household waste.
- Not for use by children.
- Choking hazard: contains small parts.

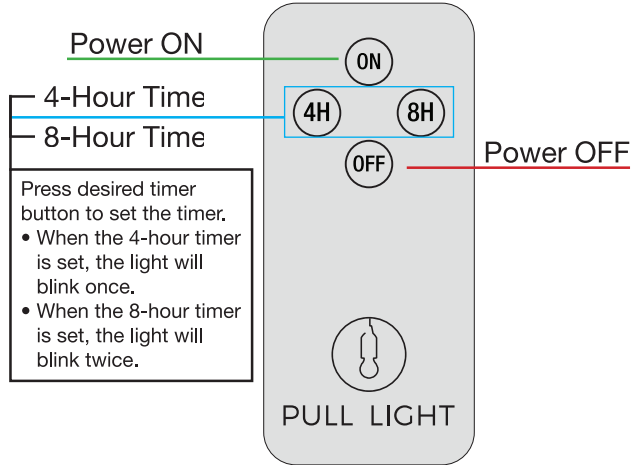

Read Instructions
Before Operating

MADE IN
CHINA



Rev: 092718

VIATEKPRODUCTS.COM

For questions, assistance, or replacement parts, do not return to your retailer. Contact Viatek® customer service below. For refunds on items not purchased from Viatek® directly, please contact your retailer.

VIATEK® 1-YEAR LIMITED WARRANTY

Viatek® warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Viatek® will replace the entire product or, at its option, repair or replace the defective part(s) without charge. Contact Viatek® customer service at 888.784.2835 or at cs@viatek.com to determine whether it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt. Mail prepaid to Viatek Consumer Products Group, Inc. 6011 Century Oaks Dr. Chattanooga, TN 37416. This warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If you have any questions, or would like to learn more about Viatek®, please contact us at 888.784.2835 or at cs@viatek.com.

Register your product online at viatekproducts.com/register-your-product-warranty/

Customer Service / Le service a la clientele / Servicio al Consumidor
☎ 888.784.2835 (+1.423.402.9010) ✉ cs@viatek.com

Model:
PUL01-5PK

DO NOT DISPOSE OF BATTERIES IN FIRE. ALWAYS DISPOSE OF BATTERIES PER LOCAL & FEDERAL GUIDELINES.

© 2018 VIATEK CONSUMER PRODUCTS GROUP, INC. All specifications are subject to change without notice. All rights reserved.
Viatek Consumer Products Group, Inc. 2081 SE Ocean Blvd 3-AB Stuart, FL 34996