 


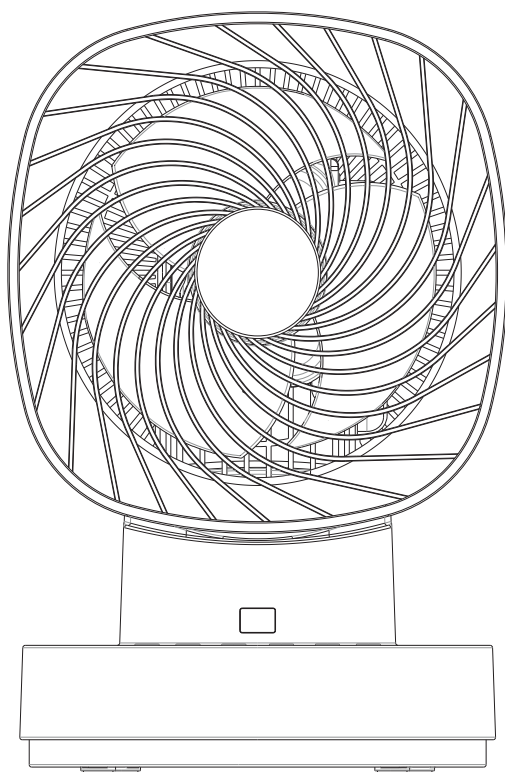

Orbital Oscillating Fan

Owner's Manual



English

Models:

**LP1280FAN
(All Colors)**

Form #LP1280FAN

02012025

©2025 Registered Trademark/TM Trademark of
LivePure LLC. Manufactured exclusively for LivePure LLC
All rights reserved

READ AND SAVE THESE INSTRUCTIONS

Table of Contents

Important Safety Instructions

Safety Warnings.....	3
----------------------	---

Using Your Fan

Getting to Know your Fan.....	8
Basic Set-Up.....	9
Control Panel Functions.....	10
Using the Remote.....	12

Maintenance

External Cleaning.....	13
------------------------	----

Fan Assistance

Troubleshooting.....	14
Technical Support.....	15

Warranty

1 Year Guarantee.....	16
-----------------------	----

Safety Warnings

READ AND SAVE THESE INSTRUCTIONS!

Important Safety Instructions: Read all the instructions before using this fan.

- DO NOT disassemble, repair or modify the product. Doing so can cause fire, electric shock or injury.
- ALWAYS use only as described in this LivePure Owner's Manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- DO NOT turn on the product unless the fan blade and guard are installed properly.
- DO NOT use this product with any solid-state speed control device. This will reduce the risk of fire or electric shock.
- Product intended for household use only.
- DO NOT use product for anything other than its intended use. Doing so could cause the product to malfunction or cause fire.
- DO NOT use near radio or televisions. Doing so may interfere with radio or television signals.
- DO NOT use in places exposed to direct sunlight or heating devices.
- ONLY use product on a level, stable surface. Failing to do so could cause the product to tip over.
- ALWAYS place product in locations away from curtains and hoisting strings. Failing to do so can cause damage to the articles near the product.
- DO NOT spray with insecticides, hair sprays, or lubrication oils, etc.
- DO NOT use near flammable substances, objects that have flames, or combustible materials. Failure to do so could cause fire.
- DO NOT place product in a spot where it could fall. If the unit falls, it could malfunction.

Safety Warnings

- DO NOT place product near water sources, like a bathtub, sink or swimming pool.
- DO NOT get the unit wet. Doing so can cause fire or electric shock.
- DO NOT use in rooms with high humidity levels, such as bathrooms.
- ALWAYS use on dry locations only. DO NOT use on wet surfaces. DO NOT use in bathrooms, laundry areas or similar indoor locations.
- DO NOT use the product with the air flow pointed at a combustible appliance such as a heater. Doing so can cause carbon monoxide poisoning and fire.
- DO NOT use in locations where there is a lot of dirt or dust.
- DO NOT use while covered or blocked with cloth, paper, or plastic bags, etc.
- DO NOT insert foreign objects such as metal into the fan outlet.
- DO NOT place fingers into the guard, or any moving part of the fan.
- ALWAYS keep fan away from children unless supervised by an adult.
- DO NOT climb on or tip the product over. Doing so may lead to injury or electric shock.
- DO NOT point air flow directly at your body. The air flow can be very strong.
- DO NOT place near plants. Air blowing directly on plants can be harmful.
- ALWAYS grab the power plug to unplug it.
- ALWAYS unplug the product when it is not in use for extended periods of time.
- ALWAYS pick up and carry the fan by the base of the unit.
- ALWAYS unplug the product when performing maintenance, inspecting, or moving the product.

Safety Warnings

- STOP use immediately if you experience any of the following malfunctions: Abnormal sounds or odors; power plug or cord becoming abnormally hot; product periodically stops during operation; loss of power when the power cord is used; tingling sensation from electric current felt when the product is touched.
- **Contact LivePure Customer Service when service or repair is required.** DO NOT disassemble the product as it may result in an electric shock or fire.

Safety Warnings

- **CHOKING HAZARD:** This remote control unit contains a small battery. Keep the remote control away from children and do not swallow the battery. If the battery is swallowed, seek medical advice immediately.
- If the appliance is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the LivePure® Customer Service Center.
- Contact the LivePure® Customer Service Center when service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or filter.
- Do not use in extreme environments such as in high temperatures, humidity, sun exposure, acid, or alkali to prevent damage, failure, or fire.
- This fan is suitable for outdoor use.

WARNING: To reduce the risk of electric shock, do not expose to water or rain.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL: Always dispose the battery-operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.


Safety Warnings

Battery Safety


- The remote contains a lithium battery, keep out of reach of small children. Seek medical advice if swallowed.
- To prevent battery leakage: Remove the battery from the remote if exhausted or before long periods of storage.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above manufacturer' s specified temperature rating or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Getting to Know Your Fan


Front View:

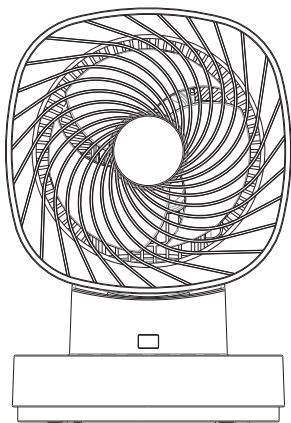

Back View:

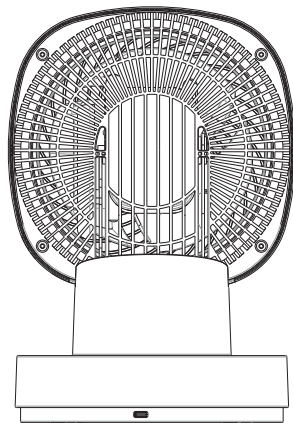

Control Panel:

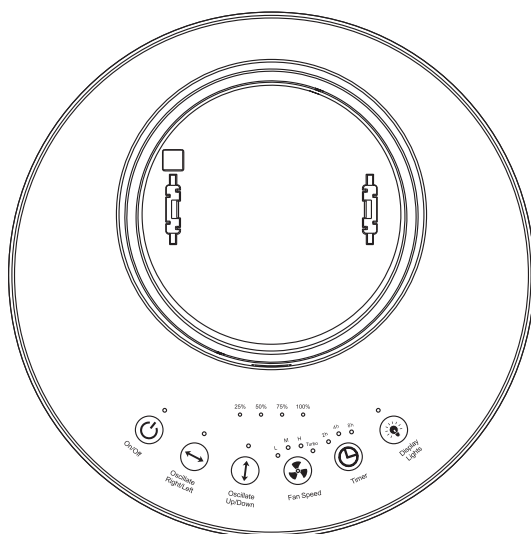


How to Use Your Fan

Basic Set-Up:

1. Carefully remove fan from box and remove any packaging material. Your box should contain a remote and a fan.
2. Extend power cord and inspect for any signs of damage. If damaged, refer to Technical Support.
3. Connect power cord to unit and plug cord into minimum 5V/2A USB Type A charger.
4. Turn on unit by pressing ON/OFF button on fan or remote. The product should beep when buttons are pressed.
5. Refer to "How to Use Your Fan" for more information on operating your fan.

Note: *Using the fan while charging will slow the charging rate.*

Note: *Fan may need to be charged before operating on battery power. Refer to Battery Level to check how much charge battery has.*

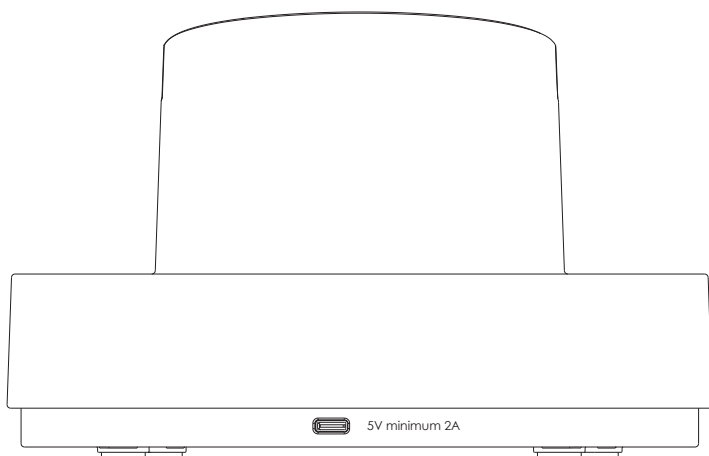

How to Use Your Fan

On/Off:



Press the power button "On/Off" on the unit or the remote to turn on the product. The light above the button will light up when powered on.

Note: The product will always start running on medium fan speed when turned on.

Oscillation:

You cannot manually change the angle of the product. You must press the oscillation buttons to change the angle. Trying to change the angle manually could damage the product.

Horizontal Oscillation:



Press the "Oscillate Right/Left" button on the unit or the remote to make the fan rotate horizontally. Press the button again to make the horizontal oscillation stop. The light above the button on the unit will be on if the setting is in use (unless the display lights were turned off).

Vertical Oscillation:



Press the "Oscillate Up/Down" button on the unit or on the remote to make the fan rotate vertically. Press the button again to make the vertical oscillation stop. The light above the button on the unit will be on if the setting is in use (unless the display lights were turned off).

Note: The product can operate with both horizontal and vertical oscillation running at the same time for a full oscillation effect.

How to Use Your Fan

Fan Speed:



Press the "Fan Speed" button on the unit or the remote to control the speed of the fan. The product will automatically start on the medium "M" speed when turned on. Press the button again to pick the high "H" speed setting, once more for the turbo "Turbo" speed setting, and once more for the low "L" speed setting. The light above the "Fan Speed" button on the unit will be on under your chosen setting (unless the display lights were turned off).

Timer:



You can program your fan to turn off after a set time using the Timer button. You are able to choose between 2 hours, 4 hours and 8 hours. Press the "Timer" button on either the product or remote once to set the timer to 2 hours, press again to set the timer to 4 hours, and press one more time to set the timer to 8 hours. Press the button again to reset the timer and turn it off. The light will be displayed above your chosen time. If no light is lit above the "Timer" button on the product, there is no timer set (unless the display lights were turned off).

Display Lights:



Press the "Display Lights" button on either the product or the remote to turn off the blue lights on the display panel. The light above the "Display Lights" button will remain on but dimmed. The chosen settings, including oscillation, fan speed and timer, will remain even with the display lights turned off. Press the button again to turn the lights back on.


Battery Level:

Battery level status is indicated by blue lights indicating 4 ranges of battery level (25%, 50%, 75%, and 100%). When powered by battery, battery level range will be displayed when fan is turned on. Indicator lights blink while charging.

How to Use Your Fan

Using the Remote:


Your remote comes with a battery installed and does not need to be programmed. Before using your remote for the first time, you must take out the pull tab. To use remote, make sure to point it at the front of the unit. The remote will not work when pointed to the backside of the unit.

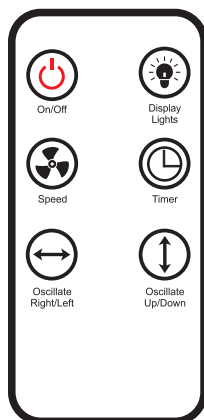


Replacing the Remote Battery:

It is recommended to replace the battery when the product takes a long time to respond or stops responding when the buttons are pressed.


1. Turn over remote control. Remove screw with a Phillips screwdriver. Press tab A toward the right and pull.

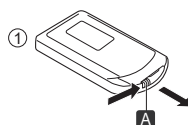

2. Pull out battery holder B and replace the battery. Only use the specified battery type (Lithium Button Cell Battery CR2025). The battery must be installed with the positive side facing up.

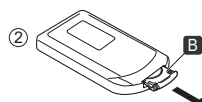

3. Insert battery holder B back into remote.

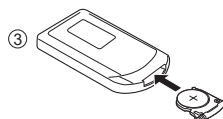

Note: Do not apply excessive force to battery holder. Remove battery when not using for an extended period of time. When disposing of used battery, please use the correct method of disposal.



Battery: Lithium Button Cell Battery
(CR2025) / 3V

WARNING

INGESTION HAZARD: This product contains a button cell or coin battery.
DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as 2 hours.
KEEP now and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Maintenance


Cleaning the Fan:

Before cleaning the fan, please read the following:

- Always unplug the fan and disconnect from power before cleaning.
- Do not immerse the fan in water or other liquid and never allow water to drip on the motor housing.
- Do not use gasoline, paint thinner, or any other corrosive cleaning solutions to clean the fan.
- If the fan will not be in use for an extended period of time, you may leave the fan assembled. Cover to protect from dust. Store in a cool, dry place.

External Cleaning:

- Wipe the external grill lightly with a soft cloth.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan.
- If needed, you can use a cloth with a diluted neutral detergent.
- To clean between the grills, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove dust.

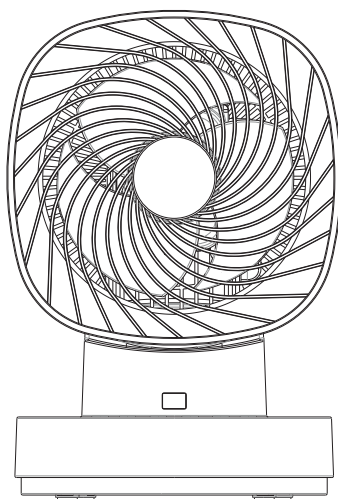

Troubleshooting

Problem: Fan makes an unusual/excessive noise

Solution:

1. Reset the fan. Unplug the fan for 1 minute, then plug back in.
2. Check for excessive dust, build up and clean accordingly.
3. If fan is still making an unusual noise, discontinue use and contact LivePure Customer Service.

Problem: Fan is not working

Solution:

1. Make sure the fan is fully charged.
2. Make sure minimum 5V/2A USB Type A charger is being used.
3. Make sure the fan is powered on. Press "On/Off" button on either the remote or unit.

Problem: Fan charger is warm or charging slowly

Solution:

1. Make sure minimum 5V/2A USB Type A charger is being used.

Problem: Fan has reduced air flow.

Solution:

1. Reset the fan. Unplug the fan for 1 minute, then plug back in.
2. Check for excessive dust, build up and clean accordingly.

Troubleshooting

Note: If your fan experiences any of the following problems, stop using the fan immediately, unplug from the wall outlet and contact the LivePure Customer Service Center toll-free (USA & Canada): 888-855-5426 OR see your warranty.

1. After connecting to the power supply and turning on, the fan still does not operate
2. Abnormal noise is observed during operation
3. Moving the power cord stops operation
4. Fan rotates slowly or irregularly
5. Burning smell is observed
6. Motor, plug or power cord become abnormally hot

WARNING: DO NOT attempt to take apart the unit by yourself. Doing so may void your warranty and cause damage to the product or personal injury.

Customer Support

If you need any assistance with setup, operation, or parts for your new LivePure® Fan, please call us. Our technical support staff is ready to help! Hours of operation are from 8:00 AM to 6:00 PM EST.

Telephone:

USA/Canada: 888-855-5426

Email:

info@livepureshop.com

Online Chat:

www.livepureshop.com

Warranty

The LivePure® company, Inc. makes the following warranty to the original residential user or consumer purchaser of the Orbital Oscillating Fan. If any part of the Orbital Oscillating Fan fails during the first (1) year from the date of purchase due to a defect in material or workmanship, we will provide a replacement part free of charge. If no replacement part can be provided, we will replace your fan.

IF THE ORIGINAL RESIDENTIAL USER OR CONSUMER PURCHASER CEASES TO OWN THE ORBITAL OSCILLATING FAN, THIS WARRANTY AND ANY IMPLIED WARRANTY WHICH THEN REMAINS IN EFFECT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE.

This warranty is voided if your Orbital Oscillating Fan is not purchased and used in the USA or Canada. This warranty excludes and does not cover defects, malfunctions, or failures of the fan which were caused by repairs by persons not authorized by us, use of parts, or accessories not authorized by us, mishandling, modifications, or damage to the fan while in your possession, or unreasonable use, including failure to provide reasonable and necessary maintenance. This warranty does not cover fans used in commercial applications. There are no express or implied warranties as to commercial purchasers or users.

To obtain service, contact LivePure® Customer Service at 888-855-5426. You will be responsible for insurance and freight or other transportation to our factory service center. We will return the fan freight prepaid. The fan should be properly packaged to avoid damage in transit since we will not be responsible for any such damage. Proof of purchase is required when requesting warranty service. The purchaser must present sales receipt or other document that establishes proof of purchase.

Warranty

IN NO EVENT SHALL LIVEPURE COMPANY BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE FAN. YOUR SOLE REMEDY WILL BE REPAIR OR REPLACEMENT AS PROVIDED ABOVE. SOME AMERICAN STATES AND CANADIAN PROVINCES DO NOT ALLOW:

LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS; THE EXCLUSION OR LIMITATION OF DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES; THE EXCLUSION OR INVALIDITY OF EXPRESS OR IMPLIED WARRANTIES IF THE USER CEASES TO OWN THE FAN; THE LIMITATION OF THE REMEDIES AND RECOURSES AVAILABLE TO THE PURCHASER; OR THE INVALIDITY OF AN EXPRESS WARRANTY WHEN A PRODUCT IDENTIFIED BY BRAND NAME IS NOT USED (UNLESS SPECIFIC CONDITIONS ARE FULFILLED);

SO, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Warranty

What's not included:

- Units that are sold “as is”, are used, or sold by unauthorized resellers (an unauthorized reseller is defined as any third-party reseller who has no official relationship with Mindful LLC.). Mindful LLC will have the final determination regarding who an unauthorized reseller is determined to be.
- Shipping or freight charges to return products for warranty service.
- Commercial or non-residential use or use inconsistent with the product instructions and manuals.
- Consumable parts (e.g., light bulbs, batteries, filters, etc.)
- Defects or damage resulting from accident, misuse, abuse, alteration, fire, floods, or acts of God.
- Cosmetic damage (e.g., scratches, dents, chips, and other damage to finishes), unless such damage results from defects in materials and workmanship and is reported within 30 days from the date of delivery.
- Units with original, factory installed model numbers removed, altered, or not easily determined.
- Damage resulting from improper packing of products returned for warranty service.
- Replacement parts, repair labor costs and/or replacement of a “failed” **fan** operated outside the United States and Canada.

