

1 YEAR LIMITED WARRANTY

Your Wolfgang Puck Oil & Vinegar Dispenser is warranted to be free of defects under normal household use for a period of one year from the date of original purchase to original purchaser.

This warranty excludes damage caused by accident, misuse or abuse, and does not apply to scratches, stains, discoloration or other damage which does not impair the functionality of the product.

This warranty gives you specific legal rights, and you may also have other rights which vary from state (province) to state (province).

Proof of purchase required to validate the warranty.

Shipping and handling charges may apply.

For questions or concerns please contact customer service at:

Synergy Housewares, LLC.

Toll-free: 866-444-4033

Hours: M-F 9:00am-5:00pm EST

Website: warranty.synergyhousewares.com

Printed in China

Model SWP2OD25

Actual product may differ slightly from images in this manual
Wolfgang Puck is a trademark of Wolfgang Puck Worldwide

WOLFGANG PUCK

USE AND CARE

OIL & VINEGAR DISPENSER



Available in:
Black, Midnight Blue,
Red, and Turquoise

Model SWP2OD25


Wolfgang Puck

Oil & Vinegar Dispenser Use and Care


Before Your First Use

Hand wash your dispenser in warm water with mild dishwashing soap using a sponge or nylon pad. See cleaning section on how to disassemble for cleaning. Rinse and dry thoroughly.

How to Use Your Wolfgang Puck Oil & Vinegar Dispenser

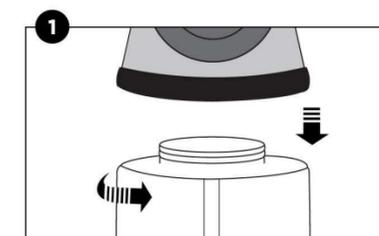


Unscrew the Liquid Chamber from the bottom of the Vacuum Chamber Housing. Fill Liquid Chamber with oil or vinegar, then reattach the Liquid Chamber.

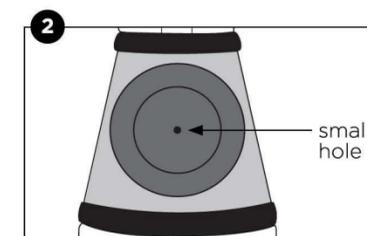


The Flexible Buttons are located on each side of the Vacuum Chamber Housing. Each button has a Small Hole in its center.




Place your thumb and index finger on the Flexible Buttons, one on each side of the Vacuum Chamber Housing. Make sure your fingers completely cover the Small Holes.

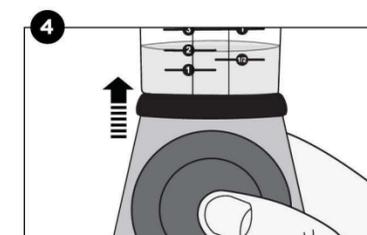

Press both Flexible Buttons at the same time to draw liquid from the Liquid Chamber up into the Measuring Chamber. Keep the Small Holes fully covered.

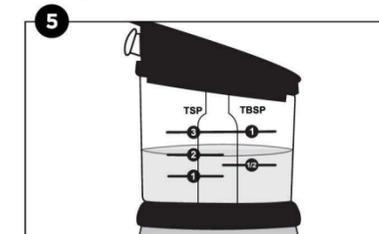

Using the Measurement Markings (TSP, TBSP, or ML) as a guide, press the Flexible Buttons (repeating as needed) until the Measuring Chamber is filled to the desired amount. Release the Flexible Buttons to stop.

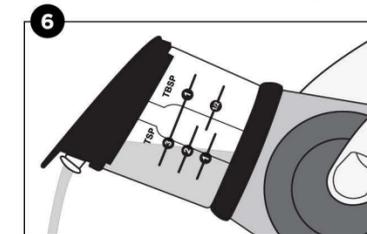

To pour, cover both Small Holes completely with your fingers without pressing the Flexible Buttons, then tilt the dispenser to pour out of the Spout.

Cleaning

To disassemble dispenser for cleaning:

- Unscrew the Measuring Chamber from the top of the Vacuum Chamber Housing.
- Unscrew the Liquid Chamber from the bottom of the Vacuum Chamber Housing.
- Pull out the Flexible Buttons from the sides of the Vacuum Chamber Housing.
- Remove the Pouring Cap by pulling it off the top of the Measuring Chamber.

The dispenser is not dishwasher safe. Hand wash all parts in warm water with mild dishwashing soap using a sponge or nylon pad. Rinse and dry thoroughly.

Do not use harsh cleaners or abrasive cleaning pads as this may damage the dispenser.

Always ensure all parts are completely dry and fully reassembled before use to prevent leaks.

Warnings and Safeguards

Do not place the dispenser in the microwave, oven, dishwasher, or on the stovetop.

Use only with food-safe liquids such as oil and vinegar.

Do not use harsh cleaners or abrasive cleaning pads as this may damage the dispenser.

Keep the Small Holes of the Flexible Buttons covered by your fingers during measuring and pouring to ensure proper function.

