


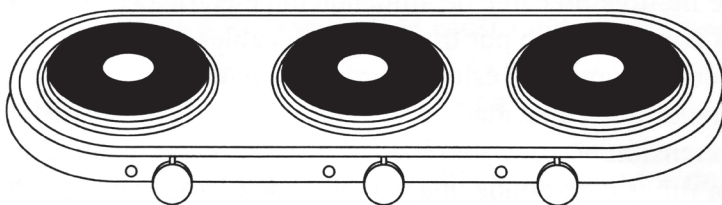

Triple Burner Buffet Range



FEATURING:

Adjustable Temperature Control

Durable Chrome Finish

Sealed Heating Elements

≡ Care and Use Instructions ≡

Model: MK-337

READ AND SAVE THESE INSTRUCTIONS

WARNING: All electrical appliances pose a risk of fire and electrical shock and may cause personal injury or death. Please operate safely by following all safety precautions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury, including the following:

- Read all instructions before using appliance.
- To prevent electrical shock, never immerse cord, plug, or the appliance in water or other liquid. See instructions for cleaning.
- Close supervision is necessary when appliance is used near children.
- This appliance is not for use by children.
- Unplug unit from outlet when not in use. Unplug and allow to cool before cleaning.
- Do not operate any appliance with a damaged or worn plug or after any malfunction occurs or if the unit has been dropped or damaged. Return appliance to Ronco for examination, repair or adjustment.
- Do not use any attachments or accessories not recommended by Ronco .
- Do not allow cord to hang over edge of table or counter or touch hot surfaces.
- Do not operate outdoors or in a damp location.
- Do not place near a hot electric burner or gas stove.
- Prior to connecting unit turn temperature control to 0.
- Do not attempt to move appliance with hot pots or pans on it.
- Allow a minimum of 6 inches of air space above and around the unit.
- Use only as indicated in these instructions.
- This unit is for Household Use Only.

SAVE THESE INSTRUCTIONS

CAUTION: A short power supply cord is provided to reduce the risk of injury from becoming entangled in the cord or tripping over a long cord. Extension cord may be used with care provided they meet the minimum electrical rating. Extension cords must be rated at 125V and minimum of 13 AMP\1625W. Be sure that the extension cord does not drape over counter or table where it can be pulled on by children or tripped over by accident.

POLARIZED PLUG: This appliance has a polarized plug (one blade is wider than the other) This plug is designed to fit in a polarized outlet only one way. If the plug does not fit the outlet reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

ELECTRIC POWER: If operated with other appliances a circuit overload may occur. This unit should be operated on a separate electrical circuit from other appliances.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

OPERATING INSTRUCTIONS

Before using for the first time wipe unit clean with a damp cloth. Dry thoroughly. Set unit on highest setting and heat unit to remove any manufacturing residues.

- Place unit on a smooth flat counter top surface. Be sure temperature control knob is in off (0) position. Plug in. Set burner(s) at desired temperature. The higher the number the higher the temperature.
-
-

OPERATING INSTRUCTIONS Continued

- The temperature/power indicator light will illuminate and stay illuminated until the temperature setting has been reached. It will then cycle on and off until the unit is turned off or unplugged.
- Allow burner to preheat approximately one minute before placing cookware on the burner.
- Use only cookware with FLAT bottoms. This unit will work with all types of cookware. For best results it is recommended to use cookware that matches approximately the size of the burner surface(s).
- Use the burner(s) as you would use a normal cooking range.
- When finished turn heat control to "0" position and unplug.

CAUTION

- **Avoid electrical shock.**
- **No user serviceable parts inside.**
- **Refer servicing to qualified service center.**
- **Never operate the unit in a tilted position.**
- **Do not leave unit unattended.**
- **Never leave unit plugged in when not in use.**
- **Always place cookware on the stainless steel warming surface.**
- **Never allow power cord to hang over counter edge.**
- **Always allow 6 inches clearance on top and sides of the unit.**
- **Always use away from flammable material and other heat sources.**

CARE AND CLEANING

To clean: Turn unit off and unplug. Allow unit to cool completely.

Wipe unit with a soft damp cloth. NEVER IMMERSE UNIT IN WATER.

Do not use steel wool pads or abrasive cleaners on the burner as they may scratch or damage the chrome finish.

Limited One Year Warranty

Ronco Holdings, Inc. warrants that this appliance shall be free from defects in material and workmanship for a period of one year from the date of purchase to the original owner. During that period these defects will be repaired or the product will be replaced at Ronco Holdings, Inc.'s option without charge. This warranty covers normal domestic household use only and does not cover damage which occurs in shipment or failure which results from alteration, accident, misuse, neglect, commercial use or improper maintenance. This warranty gives you specific legal rights. You may have other rights which vary from state to state.

ANY OTHER RIGHT YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED TO THE DURATION OF THIS WARRANTY. INFUSION COLLECTION WILL IN NO EVENT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

To Return for Service:

Ronco Holdings, Inc. Infusion Collection Triple Burner Buffet is warranted to be free from defects in material and workmanship under normal household use for a period of 1 year from the date of original purchase. If your Triple Burner Buffet is found to be defective during the warranty period it may be returned Postage paid by the consumer along with receipt to:

Customer Service:

Ronco Holdings, Inc.
15505 Long Vista Dr., Ste 250
Austin, TX 78728
1-855-857-6626
support@ronco.com