

5 YEAR LIMITED WARRANTY

Your Wolfgang Puck Mixing Bowl Set is warranted to be free of defects under normal household use to the original purchaser for five years.

This warranty excludes damage caused by accident, overheating, misuse or abuse, and does not apply to scratches, stains, discoloration or other damage which does not impair the functionality of the mixing bowls.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Proof of purchase required to validate the warranty.

Shipping and handling charges may apply.

For questions or concerns please contact customer service at:

W.P. Productions, Inc. • P.O. Box 3150 • Hallandale, FL 33008

Toll-free: 800-275-8273 • Hours: M - F 8:30am - 5:00pm EST
www.wphousewares.com • Printed in China

WOLFGANG PUCK

USE AND CARE

8 PIECE MIXING BOWL SET



*Set Includes:
1Qt, 2Qt, 3Qt and 5Qt Covered Mixing Bowls*



*Available in Black, Blue,
Orange, Red, Green & Pink*



Wolfgang Puck

8 Piece Mixing Bowl Set

Use and Care

Before Your First Use

Hand wash all parts of the mixing bowl set in warm water with a mild dishwashing soap using a soft sponge or nylon pad. Rinse and dry thoroughly.

Using Your Wolfgang Puck Mixing Bowl Set

Your Wolfgang Puck Mixing Bowls are freezer and refrigerator safe.

Do not use your mixing bowls in the microwave or directly on your stovetop. This can damage the mixing bowls as well as your microwave or stovetop.

Your mixing bowls are oven safe to 400°F. The plastic covers are NOT oven safe. Do not place in the oven or near a direct heat source.

Using Your Splash Guard

The 5qt mixing bowl of your Wolfgang Puck Mixing Bowl Set features a uniquely designed cover with a center plastic insert that can be removed to add ingredients to the bowl as well as to use the cover as a splash guard. The splash guard prevents splashes and splatter while using a hand mixer or immersion blender with your 5qt mixing bowl.

The plastic insert is located in the center of the cover. Lift up on the small tab to remove. (Figure 1)



Figure 1

Using Your Mixing Bowls as a Double Boiler

The mixing bowls can be used with a small saucepan as a double boiler. To use, follow the below steps:

Step 1:
Fill the saucepan 1/4-1/3 full with water. Do not overfill as this can cause water to spill out when the mixing bowl is placed inside.

Step 2:
Place the mixing bowl on top of the saucepan so that it creates a seal with the edge of the saucepan. Please note that the water should not touch the bottom of the bowl.

Step 3:
Place your desired food, such as chocolate or cheese, inside the mixing bowl. Heat over medium heat on your stovetop. Stir periodically until melted.

In the beginning, there was Wolfgang Puck. There were cooks and there were kitchens and there were people eating food, but the world had never seen anything like Spago—with its California cuisine, its casual elegance, and its chef whose genuine warmth and love of craft redefined the dining experience. And they came—from LA and from everywhere—to experience the future. Wolfgang Puck shaped the modern culinary landscape: he was the first celebrity chef, the inventor of fusion cuisine, the first in farm-to-table. His work is inspired by California living, and an insistence on only the freshest ingredients. From his legendary fine dining icons, his entrepreneurial spirit has built an empire—from dining, to catering, to products for the home—touching the lives of millions around the globe. Today, as always, Chef Puck is earnestly, restlessly, tirelessly at work behind the scenes inventing what's next. He is driven by a genuine love of his craft, a passion for what's possible, and its potential to change the world.

Please keep the following precaution in mind when using the mixing bowls as a double boiler:

We recommend that you periodically check the saucepan to ensure that there is sufficient water remaining. Refill if necessary. DO NOT let the pan boil dry.

The mixing bowl will get extremely hot. ALWAYS exercise extreme caution when handling and use a potholder or oven mitt at all times.

Cleaning

Your Wolfgang Puck Mixing Bowl Set is dishwasher safe, however hand washing is recommended to retain the original luster and shine and to prevent discoloration of the silicone base.

To clean, simply use warm water a mild dishwashing soap and a soft sponge or nylon pad. If you choose to clean in the dishwasher, place the plastic covers on the top rack only.

Do not soak in water for a long period of time. The chlorine and mineral content of your water, especially iron, can cause corrosion or discoloration.

Removing Stains of the Stainless Steel

We recommend the use of stainless steel cleaners to remove stubborn stains from your mixing bowls, such as Wolfgang Puck Stainless Steel Powder Cleaner, Bon Ami®, Cameo® or Barkeeper's Friend®.

Do not use stainless steel cleaner on the silicone base or on the plastic cover.

Warnings

The mixing bowls will get hot if placed in the oven for an extended period of time. Use a potholder or oven mitt AT ALL TIMES.