

TS6020 Setup Using Canon PRINT Inkjet/SELPHY - iOS

Description

Setup using your iPhone, iPad, or iPod touch.

Solution

Set up your printer using "Canon PRINT Inkjet/SELPHY," an application for iOS.

Use "Canon PRINT Inkjet/SELPHY," to easily print or scan from your iPhone, iPad, or iPod touch.

You can also use it to check the printer's ink model numbers and other information.

In this section, descriptions are based on the screens displayed when using iOS 9.2.



Downloading the Application

Download the application for free from the App Store.

Go to App Store (<https://itunes.apple.com/us/app/pixma-printing-solutions/id664425773?mt=8>)

»» Important

- To download the application, you must register for an App Store account.
- The application can be downloaded for free; however, transmission fees for connecting to App Store apply.
- Download is not possible if your operating system environment does not support the application. The application download page may not appear.

 
Application Setup

Once you have installed the application, follow the steps below to register the printer.


»» Note

- Screens displayed may vary depending on your iPhone, iPad, or iPod touch.
-

1. Make sure printer is turned on.
2. Start application and tap screen.

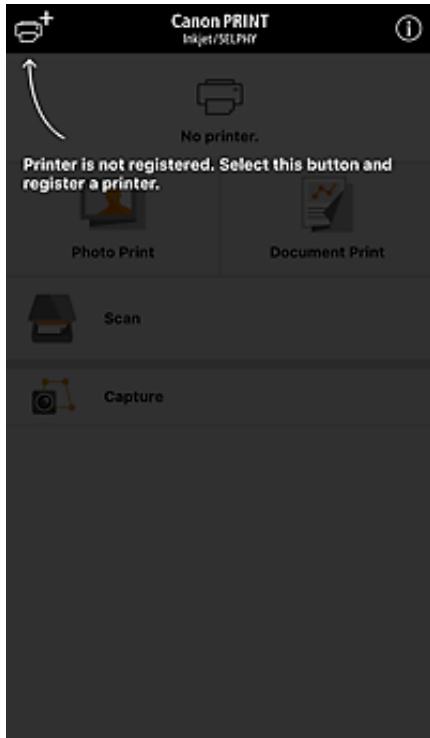

 
3. Check if your printer appears at top of screen.

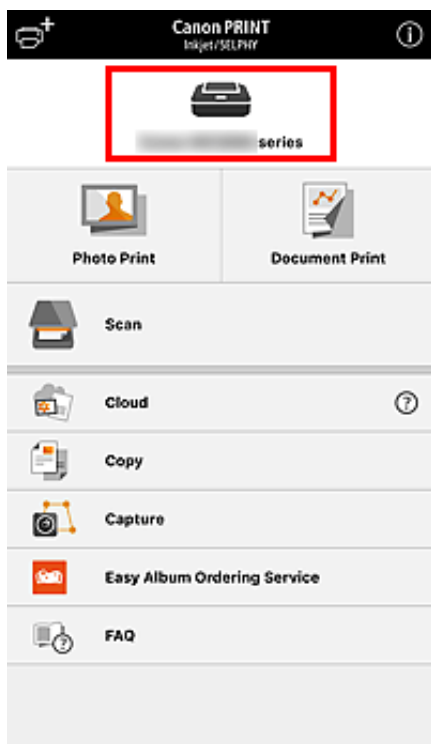

If so, setup is complete. There is no need to perform the steps below.

If it does not appear, proceed to the next step.

4. Tap  (Register Printer) > **Register Printer**.

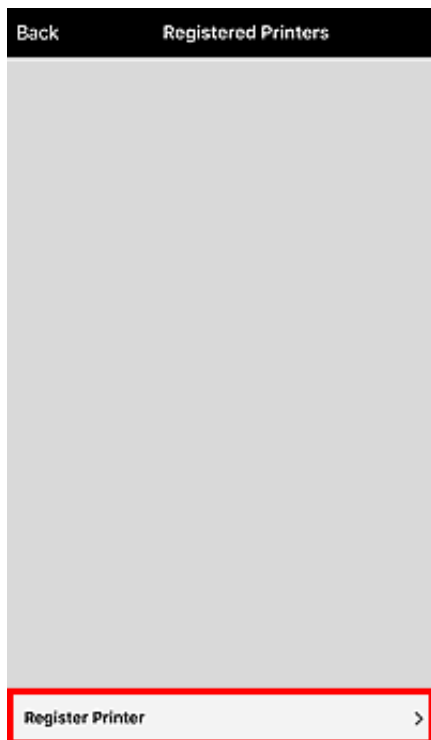


Printer detection starts.

When the printer detection is complete, tap your printer name that appears in the screen > **OK**.

➤➤➤ Note

- Change the printer name as needed.
-

 5. Check if your printer appears at top of screen.

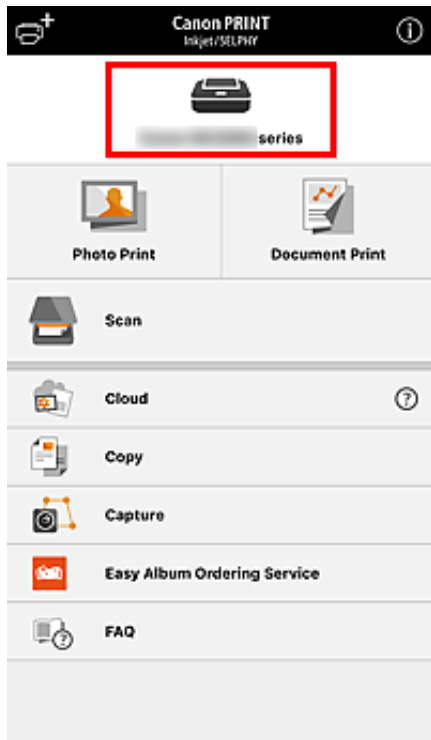

When the registered printer appears at the top of the screen, setup is complete.

If your printer is not detected, proceed to the next step to continue with the setup.

»» Note


- Detection may take time.
 - If the printer is not detected even though its network connection is already complete, make sure the printer is connected to the same wireless router as your iPhone/iPad/iPod touch.
-

6. In Wi-Fi settings screen on iPhone/iPad/iPod touch, tap SSID starting with "Canon_ij_."


If the SSID is not displayed, prepare a connection on the printer.

For details, see "[Start Easy Wireless Connect](https://support.usa.canon.com/kb/index?page=content&id=ART167155)" (<https://support.usa.canon.com/kb/index?page=content&id=ART167155>).

7. Return to application screen and tap **Perform Wireless LAN Setup**.

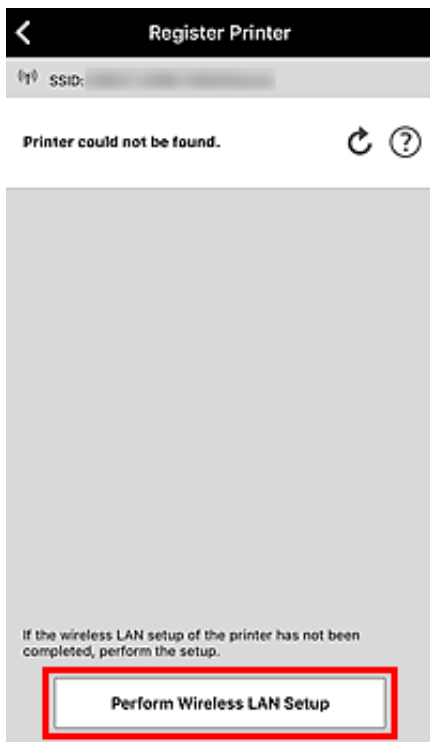

 8. Tap **Auto Select Conn. Method (recommended)**.

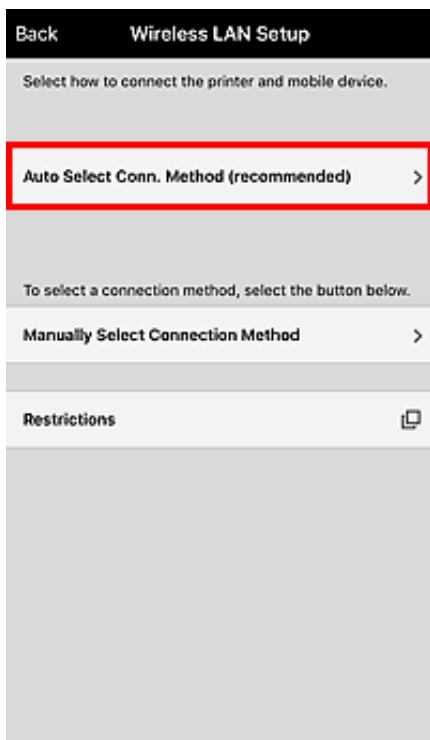

9. Tap SSID of wireless router to which you want to connect printer.

If there is no wireless router connected to Wi-Fi, the **Direct Connection** screen appears depending on your printer. Follow the on-screen instructions to register the printer.

»» Note

- For restrictions on Direct Connection, see "[Restrictions](https://support.usa.canon.com/kb/index?page=content&id=ART167466)".

10. On password entry screen, enter password for wireless router.

If a password entry screen does not appear, proceed to the next step to continue with the setup.

11. Follow on-screen instructions and tap **OK**.


Printer detection starts.

When the printer detection is complete, tap your printer name that appears in the screen > **OK**.

»» **Note**

- Change the printer name as needed.
-

12. Check if your printer appears at top of screen.

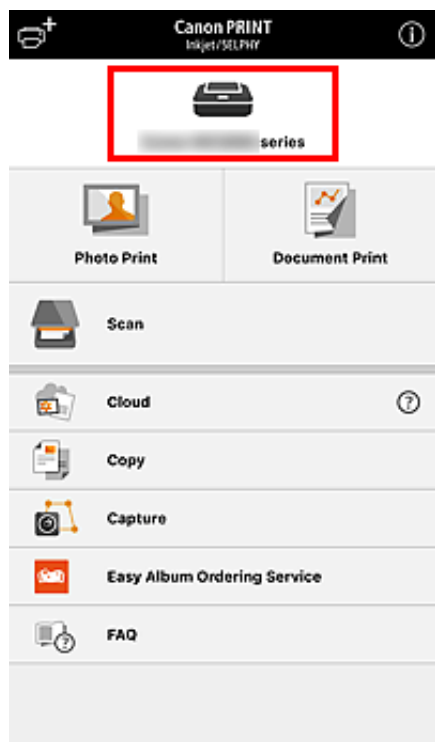

When the registered printer appears at the top of the screen, setup is complete.

If your printer is not detected, perform the setup again from Step 6.

»» **Note**

- Detection may take time.
-

Printing Using Application

1. Start application.

2. Tap **Select Images**.

»» Note

- **Select Images** appears only when registering a printer. If **Select Images** does not appear, tap **Photo Print**.
-

3. Select image you want to print, and then tap **Select**.

4. Tap **Next** at bottom right of screen.

5. Specify printer to use, paper size, and other settings.

6. Tap **Print**.

Printing starts with the specified settings.