



Quick Start Guide:

1. Please ensure SD card is inserted securely into the SD card slot before you start charging your GoVision glasses.
2. Please fully charge your glasses before use to ensure high quality video and still photography.
3. Glasses are fully charged when solid red light is on.

How to format MicroSD Card:

If your GoVision glasses are on and your indicator light stays solid red for 1-2 minutes and shuts off automatically the SD card must be formatted.

Windows:

1. Go to MY COMPUTER
2. Go to Removable Disk Drives
3. Make sure your cursor is over the drive that holds the Go Vision Glasses (ex: Removable Drive E)
4. Right Click
5. Go to Format
6. Click on it
7. A box will appear asking to format
8. click start

MAC:

1. Open the Applications Folder select Utilities
2. Click on Disk Utilities
3. Click on the Untitled Folder on the left pane of disk utilities
4. Select Quickly
5. Click on erase