

KITCHEN **HQ**

MICROWAVE COOK, GRILL, & STORE SET INSTRUCTION MANUAL



MODEL: 914670

Read this booklet thoroughly before using and save it for future reference.

WARNINGS


- Surfaces can get hot when in use. Use oven gloves/mitts when handling and take caution.
- The Microwave set is suitable for a microwave oven operating in microwave mode only.
- **WARNING!** Handling hot surfaces with wet oven gloves can produce steam causing serious burns to skin.
- To be used Microwaves up to 1200W power. Do not use at a power setting above 1200W.
- Do not use it for longer than 25 minutes continuously. If the item is used twice in a row at 25 minutes each time, allow it to cool before its next use.
WARNING! DO NOT exceed 25 Minutes for each period of cooking. If additional 'cooking time' is needed, allow it to cool down first.
- Never use any of the components in the Microwave empty or without food content in them.
- **WARNING!** Never pre heat the Grill Pan, Lid or Egg/Patty Pan before use.
The Grill Pan and the Egg/Patty Pan must be used separately and not together at the same time.
- Should sparking or any other unusual malfunction occur during cooking, cut the power to the microwave immediately and discontinue use of the Microwave Grill Set.
- Do not use any sharp-edged utensils when removing food from the Microwave Grill Set these may scratch/damage the nonstick coating.

BEFORE FIRST USE

- The Microwave Grill Set is designed to be used in a microwave oven up to 1200W.
- For best results the Microwave Grill Set is to be used with a microwave that incorporates a turntable. It can be used with a microwave without a turntable function, but results may vary.

- Check all components are included (see PARTS) and that there is no visible damage to any of the components. Remove all packaging materials and any possible protective films used for protection during transportation. Never remove any warnings.
- Hand wash all components thoroughly and dry before use.

PARTS

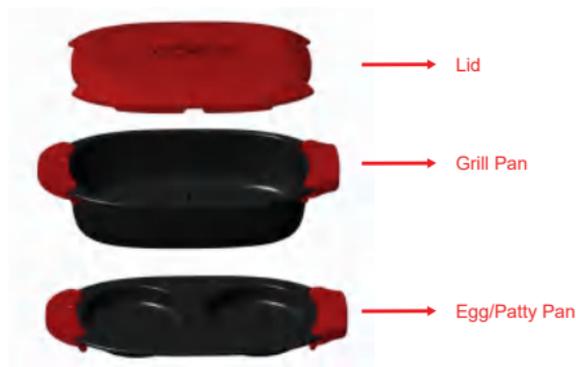

COOKING GUIDE

- The Grill Pan and the Egg/Patty Pan must be used separately and not together at the same time.
- Lightly brush or spray the surfaces of the Grill Pan or the Patty/Egg Pan with cooking oil.
- Add food into the pan of your choice, fit the lid onto the top of the pan and lace into the center of your microwave.
- Cook your food in 3-4 minute bursts until it is ready. **IMPORTANT!** Do not exceed 1200W power setting.

TIP!Why not follow one of the simple and delicious recipes at the back of this instruction booklet to get you started.Over time experiment with ingredients and timings to get your desired results!

TIP!If using in a microwave without a turntable feature you may need to turn the pan halfway through cooking.

- Once cooked to your likeness remove from the microwave always using oven gloves/oven mitts.
- Allow food to cool to a suitable temperature remove for eating and enjoy.

Using the Grill Pan Example



Step 1:
Lean the containet



Stept 2:
Put the potato into the containe



Stept 3:
Cover with lid



Stept 4:
Put into the microwave



Stept 5:
Choose 15 minutes



Stept 6:
Remove from microwave



Step 1:
Lean the containet



Step 2:
Crack the egg



Step 3:
Cover with lid



Step 4:
Put into the
microwave



Step 5:
Choose 3 minutes



Step 6:
Remove from microwave

CARE AND MAINTENANCE

- Allow the Microwave Grill Set to cool completely before washing.
- It is recommended to clean the Microwave Grill Set after every use.
- All parts are dishwasher safe; however, to prolong the life of the nonstick surface it is advised to hand wash in warm soapy water, rinse and dry thoroughly.
- Do not use any abrasive or harsh cleaning materials or solutions when cleaning these may damage the nonstick surface.
- The Microwave Grill Set can be stacked for storage (see below). Store in a cool dry place.

