LB_004b Instruction Sheet

WATER TIGHT LIGHTED MULTI-FUNCTION SILVER BRANCH

HANG TAG

1.97 in
5.00 cm

2.76 in
7.00 cm

LIGHTED BRANCH
Watertight Multicolor
DO NOT submerse in more than 6" of water.

Timer is 6 hours ON, 18 hours OFF.

USE
Press button on branch handle to activate lights.
Repeat to select desired function.

1. Warm white steady on
2. Warm white steady on with timer
3. Warm white fade with timer
4. Multicolor steady on
5. Multicolor steady on with timer
6. Multicolor fade with timer
7. Off

POLY BAG

2.362"

3.15 in
8.00 cm

FOLD INSTRUCTION SHEET
AND
INSERT INTO POLYBAG

6 cm x 8 cm

INSTRUCTION SHEET

3.07 in
7.80 cm

6.50 in
16.50 cm

INSTRUCTIONS

INSERT BATTERIES – 3 AA batteries required, NOT included

1. Remove battery cover (screw-on cap) by twisting it to the left (counterclockwise).
2. Clean the battery contacts and also those of the device prior to battery installation.
3. Insert 3 AA batteries as shown.
4. Return battery cover (screw-on cap) by twisting cap to the right (clockwise). Cap must be tight enough for light to function, as branch lights will not operate with loose cap. Cap must be tightened enough to ensure watertight seal against rubber gasket before submersing in water.

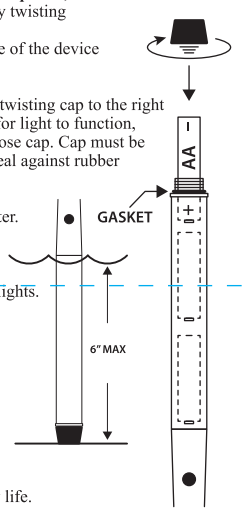

DO NOT submerse in more than 6" of water.
Timer is 6 hours ON, 18 hours OFF.

USE
Press button on branch handle to activate lights.
Repeat to select desired function.

1. Warm white steady on
2. Warm white steady on with timer
3. Warm white fade with timer
4. Multicolor steady on
5. Multicolor steady on with timer
6. Multicolor fade with timer
7. Off

CARE
1. Turn off when not in use to save battery life.
2. Remove used batteries promptly.

REMOVE BATTERIES IF EXPIRED OR IF PRODUCT IS TO BE LEFT UNUSED FOR AN EXTENDED PERIOD OF TIME.
DO NOT expose batteries to fire or water. DO NOT attempt to recharge, use different sizes of batteries, or install batteries backwards. Never touch damaged or leaking batteries—this could result in burn injuries or cause serious internal injuries if swallowed. Obtain medical attention immediately if this occurs. Misuse can cause battery to overheat, rupture, leak, or explode, resulting in personal injury and/or property damage.

BATTERY WARNING
- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Do not dispose batteries in a fire—batteries may leak or explode.

KEEP THIS INSTRUCTION SHEET FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATIO.