




# CALLBLOCKER<sup>®</sup>

THE ALL-IN-ONE CALL BLOCKER



Made for USA

## USER GUIDE



V.202

Congratulations on your new purchase!

Before using the Call Blocker please read the following important information:-

- Call Blocker protects a single corded phone, or a cordless phone with additional handsets.
- **Caller Identity service (Caller ID) is required from your telephone provider for the Call Blocker to work effectively.**
- Caller ID is a telephone service that provides the telephone number of a caller, which appear on a display as the call is being received. To register for Caller ID contact your telephone provider.
- The CPR Call Blocker will work with a wide range of telephone equipment including corded and cordless phones. It protects all the phones that are plugged into it. If you need a number of extensions in your home, we recommend that you use a modern multi-cordless handset known as a DECT phone (Digital Enhanced Cordless Telephone). Call Blocker can then protect all of your phones.
- We recommend that you connect the CPR Call Blocker to a telephone at the main telephone socket (The first point where the connection comes into your property). Intermittence and extension ringing issues may arise if the CPR Call Blocker is connected to telephones that are plugged into extension sockets.
- Some phones automatically check the network voice mail service at regular intervals and display a 'Message waiting' light. We recommend that you do not use these types of phones with the CPR Call Blocker.



## CONTROLS DESCRIPTION

### Type of masked call

These will display as and when a masked call type calls through.

### Blocked number counter

Displays the number of times a blocked number has tried to call.

### Number of calls blocked

Displays the amount of numbers that have been added to the block list.

**Up/Down**


Use these to enter the blocking menu and navigate up and down the blocked calls list.

**Delete**

Use this to delete a number from the blocked calls list.

**SETTING UP  
CPR CALL BLOCKER****Step 1**

Remove the line cable from your telephone and plug into the **LINE 2** port of the Call Blocker.

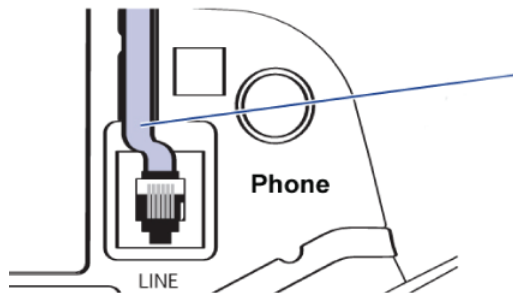

Disconnect the line cable from your telephone and plug into the **LINE 2** port of the Call Blocker.

**Step 2**

Use the short black cable provided to connect one end to the **TEL 2** port of the Call Blocker and the other end back to your telephone.

**Step 3**

Make sure that all cables are connected securely and then check for a dial tone. If the Call Blocker's LCD screen is active this will confirm that it is setup correctly.

## INSTALLATION DIAGRAM-IN LINE

4

**Main Wall  
Socket**

**Short Black  
Cable Provided**

**Line  
Cable**

**Telephone**

## BLOCK NOW

The easiest way to block nuisance callers is to use the **BLOCK NOW** button located on the top of the Call Blocker.

When a nuisance caller gets through press the 'BLOCK NOW' button and then hang up the call, this caller will now be blocked from calling again.


If you are using a DECT type cordless telephone you can also press **# 2** on your phone's keypad whilst on a call to block a nuisance call.

The **BLOCK NOW** Button only blocks visible numbers on your caller display. If you are receiving nuisance calls from **PRIVATE**, **UNAVAILABLE** or **INTERNATIONAL** callers please use the programming codes on pages 6, 7 and 8.

## INSTALLATION DIAGRAM-PARALLEL

If caller ID issues arise with the IN-LINE setup then change to a PARALLEL connection. Please note that when the call blocker is setup in this way the BLOCK NOW button will still function correctly but the unit cannot be programmed. The phone will need to be connected to the call blocker IN-LINE for when programming is needed.

**Connect the additional line cable  
from the splitter to the LINE 2 port**

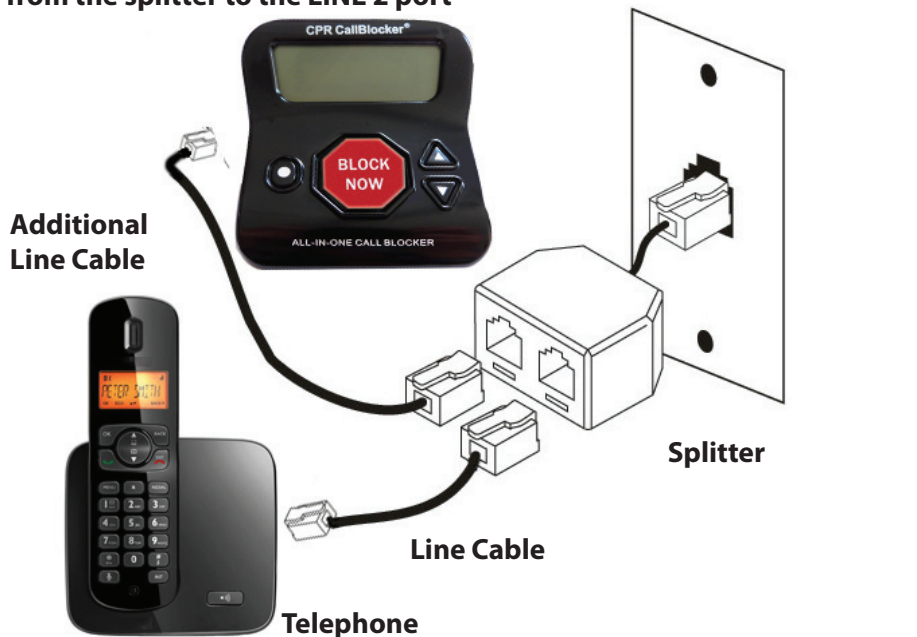

**If you are having trouble entering programming codes visit the FAQ's on page 9.**

## Programming a number into "Blocking" list

1. Pick up the telephone and input \* \* **7** # you will hear a **"Beep"**
2. Then enter the telephone number you wish to block, followed by the # key,  
You will hear a 'beep' after each # to confirm success.
3. Hang up to complete setup.

## Programming an area code into "Blocking" list

1. Pick up the telephone and input \* \* **7** # you will hear a **"Beep"**
2. Then enter the area code you wish to block, followed by the # key,  
You will hear a 'beep' after each # to confirm success.
3. Hang up to complete setup.

## Erasing one number or area code from the "Blocking" list

1. Pick up the telephone and input \* \* **6** # you will hear a **"Beep"**
2. Then enter the telephone number you wish to delete followed by the # key,  
You will hear a 'beep' after each # to confirm success.
3. Hang up to complete setup.

## PROGRAMMING CODES

### Turning the Call Blocker On and Off (**The call blocker is turned ON by default**)

1. To Turn On: Get a dial tone and input \* \* **4** # \* **4** #
2. To Turn Off : Get a dial tone and input \* \* **3** # \* **3** #

You will hear a 'beep' after each # to confirm success.

### Blocking all "Private" Callers

1. To Turn On: Get a dial tone and input \* \* **7** # **7** \* #
2. To Turn Off : Get a dial tone and input \* \* **6** # **7** \* #

You will hear a 'beep' after each # to confirm success.

### Blocking all "Unavailable" Callers

1. To Turn On: Get a dial tone and input \* \* **7** # #
2. To Turn Off : Get a dial tone and input \* \* **6** # #

You will hear a 'beep' after each # to confirm success.

### Block a number using an additional DECT telephone handset

1. Enter # **2** into the handset when on an active call to block the number.

**Note:** Three "**Beeps**" indicates that an error has occurred - Either a number has already been entered or the specified blocking function is already turned ON.



## PROGRAMMING CODES

### Blocking all "International / Out of Area" Callers

1. To Turn On: Get a dial tone and input \* \* **7** # \* #
2. To Turn Off : Get a dial tone and input \* \* **6** # \* #

You will hear a 'beep' after each # to confirm success.

### Blocking all "VOIP / IP Rogue Dialler" Callers

1. To Turn On: Get a dial tone and input \* \* **7** # **6** \* #
2. To Turn Off : Get a dial tone and input \* \* **6** # **6** \* #

You will hear a 'beep' after each # to confirm success.

### Blocking all "0" type calls (Single digit spoof callers)

1. To Turn On: Get a dial tone and input \* \* **7** # **0** #
2. To Turn Off : Get a dial tone and input \* \* **6** # **0** #

You will hear a 'beep' after each # to confirm success.

### Resetting the Call Blocker back to factory settings

1. Get a dial tone and input \* \* **1** # \* **1** #

You will hear a 'beep' after each # to confirm success.

**Note:** Three "**Beeps**" indicates that an error has occurred - Either a number has already been entered or the specified blocking function is already turned ON.

## FREQUENTLY ASKED QUESTIONS

### Q. The Call Blocker's LCD screen is inactive?

A. If you have the Call Blocker connected up using LINE 1 and TEL 1 and are unable to display the LCD screen then switch the cables over to the LINE 2 and TEL 2 ports. The same goes if you have the cables in the LINE 2 / TEL 2 ports, switch them over to the LINE 1 / TEL 1 ports.

### Q. I am unable to enter the programming codes?

A. Some telephone line providers network codes conflict with the call blocker's \* \* command. **To overcome this get a dial tone and hold the BLOCK NOW button for 5 secs. This will set the Call Blocker into programming mode and allow codes to be entered.**

### Q. Do I need caller ID for this product to work?

A. Yes, caller ID should be enabled on your telephone line for the product to work effectively.

### Q. Can I use any telephone with the CPR Call Blocker?

A. The CPR Call Blocker will work with a wide range of modern telephone equipment - cordless DECT phones, corded phones and cordless analogue phones.

### Q. Will the CPR Call Blocker work with my internet connection?

A. Yes, the CPR Call Blocker will work alongside all types of ADSL, DSL and Fibre optic connections.

### Q. Can I use the CPR Call Blocker with extension telephone sockets?

A. Yes, you can but problems can arise. The CPR Call Blocker is designed to work on one telephone socket (main socket). If you wish to have additional phones around the house it's best to use a DECT (Digital Enhanced Cordless Telephone) setup with multiple cordless handsets so that the Call Blocker can protect all the phones connected to the base station at the main socket.

## NEED MORE HELP?

If you need further help setting up the CPR Call Blocker, please email or phone through to our technical support team who will be more than happy to help with any problems or queries you may have.

CPR Distribution

616 Corporate Way

Suite 2 - 6892

Valley Cottage

New York

10989



**E-mail:** [support@cprcallblocker.com](mailto:support@cprcallblocker.com)

**Technical Support Hotline:** 408 - 872 - 6822

**Support forum:** [www.cprcallblockerforum.com](http://www.cprcallblockerforum.com)

© CPR Call Blocker 2014

Patent Number - 1200049.3

[www.cprcallblocker.us](http://www.cprcallblocker.us)

**POLICE APPROVED**

# ***New products from CPR***



***CPR Call Blocker Cell Phone***



***CPR 108 Call Blocker***

**To view our full range of innovative products  
please visit our website**

**[www.cprcallblocker.us](http://www.cprcallblocker.us)**